



Series B . Models Bxx-RTU

Meters for Modbus RTU

INDUSTRIAL SERIES . LARGE FORMAT METERS

Large format industrial meters for Modbus RTU. Different formats available with 60 mm and 100 mm digit height, 4 and 6 digits, in red or green color. Sturdy metal housing, with full IP65 protection, designed for panel, wall or hanging mount. Versatile and configurable, accepts 16 and 32 bit registers, local or remote alarm control, 'watchdog' function, 'bus activity', configurable fast access menu, 'on power up' function, password and 5 configurable brightness levels. Universal AC and DC power. Accepts up to 3 output and control options (relays, analog retransmission, Modbus RTU, transistor outputs, RS-485 ASCII, ...). Configuration from frontal keypad or remote keypad.

1. Series B, models Bxx-RTU

Large format industrial meters for Modbus RTU protocol

Large format meters for long distance reading, for industrial applications. Different formats available with 4 and 6 digits, with 60mm and 100m digit height. Front keypad to access the configuration menu, and optional remote keypad.

Meters controlled via Modbus RTU protocol. Control of the reading value, decimal point and alarm status, by writing to internal registers. Standard Modbus RTU 16 bit registers for readings from 32767 to -32767, and configurable to 32 bits registers for readings from 999999 to -199999 (see section 1.21.5).

Alarms can be configured for remote or local control by selecting the 'Full slave' or 'Process slave' modes (see section 1.21.2). In 'Full slave' mode alarms can be controlled by writing to registers or to coils (see section 1.21.6).

Bus speed up to 38.400bps and addresses from 1 to 247. 'Watchdog' function to control loss of communication with the master, with control of error message and alarm activation (see section 1.21.4).

'Bus activity' function for help on communications start-up (see section 1.21.12).


Output and control options with 1, 2 and 3 relays, transistor outputs, controls for SSR relays, isolated analog outputs, communications in Modbus RTU, RS-485 ASCII and RS-232.

Sturdy metal housing with full IP65 protection. Internal connections by plug-in screw clamp terminals, and output through cable glands. Housing prepared for panel, wall and hanging mount.

- Configurable '**Fast access**' to selected functions with key 'UP' (▲) (see section 1.21.11)
- '**On power up**' for system protection on 'cold' start-up and control of alarm status (see section 1.21.13)
- alarms in 'Process slave' mode, with 1 or 2 setpoints, independent activation and deactivation delays, hysteresis, manual unlocking, ... (see section 1.21.8)

Memory of maximum and minimum reading, password protection, 5 brightness levels.

1.1 How to order

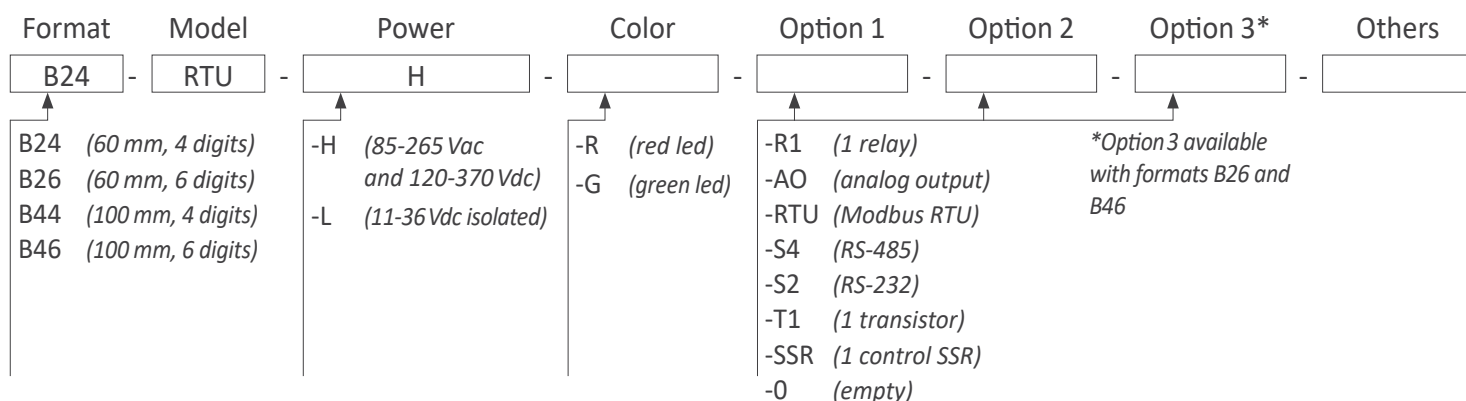

1.2 Index

1. Series B, models Bxx-RTU	2	1.21.14 'Setpoint on bus' parameter	22
1.1 How to order	2	1.21.15 'Decimal point' parameter	22
1.2 Index	3	1.21.16 'Fast access' configuration menu	23
1.3 How to use this manual	4	1.21.17 'On power up' configuration menu	23
1.4 Modbus RTU definitions	4	1.21.18 Setpoint on bus' configuration menu	23
1.5 Typical application	5	1.21.19 'Decimal point' configuration menu	23
1.6 Factory configuration	5	1.21.20 'Key LE' configuration menu	24
1.7 Sizes and formats	6	1.21.21 Password configuration	24
1.7.1 Format B24.	6	1.21.22 Default factory configuration	24
1.7.2 Format B44.	6	1.21.23 Firmware version	24
1.7.3 Format B26.	7	1.21.24 Brightness configuration	24
1.7.4 Format B46.	7	1.21.25 Access to the options configuration menu	25
1.8 To access the instrument.	8	1.22 Full configuration menu.	26
1.9 Modular system	8	1.23 Mounting.	28
1.10 Power connections and protective earth	9	1.24 Installation precautions	29
1.11 Input signal connections	9	1.25 Warranty	29
1.12 Connections for remote keypad	9	1.26 CE declaration of conformity	29
1.13 Technical specifications	10	2. Output and control modules	30
1.14 Functions included	11	2.1 Module R1	30
1.15 Messages and errors	11	2.2 Module T1	30
1.16 Start up sequence	11	2.3 Module SSR	31
1.17 Registers and functions : 16 bits 'Process slave'	12	2.4 Module AO	31
1.18 Registers and functions : 16 bits 'Full Slave'	13	2.5 Module RTU	32
1.19 Registers and functions : 32 bits 'Process slave'	14	2.6 Module S4	32
1.20 Registers and functions : 32 bits 'Full Slave'	15	2.7 Module S2	33
1.21 Configuration	16	3. Other options and accessories	34
1.21.1 How to operate the menus	16	3.1 RKB - Remote keypad	34
1.21.2 Initial set-up	17	3.2 Red LED	34
1.21.3 Addresses.	18	3.3 Green LED	34
1.21.4 'Watchdog' function.	18		
1.21.5 16 bits or 32 bits registers.	18		
1.21.6 Alarm control : registers and 'coils'	18		
1.21.7 Configuration menu	19		
1.21.8 Alarms	20		
1.21.9 Alarms configuration menu for 'full slave'	21		
1.21.10 Alarms configuration menu for 'process slave'	21		
1.21.11 Fast access	22		
1.21.12 'Bus activity' function	22		
1.21.13 'On power up' function	22		

1.3 How to use this manual

If this is the first time you are configuring a Series B large format meter, below are the steps to follow to install and configure the instrument. Read all the manual sections in order to have a full and clear view of the characteristics of the instrument. Do not forget to read the installation precautions at section 1.24.

1. Identify the instrument format (*see section 1.7*)
2. Power and signal connections
 - open the instrument (*see section 1.8*)
 - connect the power (*see section 1.10*)
 - connect the signal (*see section 1.11*)
 - close the instrument (*see section 1.8*)
3. Configure the instrument (*see section 1.21*)
 - select the working mode, and the bus configuration (*see section 1.21.2*)
 - configure the protocol (*see section 1.21.7*)
4. Advanced configuration (optional)
 - configure the instrument alarms (*see section 1.21.8*)
 - configure the fast access (*see section 1.21.11*)
 - configure other functions: 'on power up' (1.21.13), key 'LE' (1.21.20) and password (1.21.21)
5. If the instrument includes analog output (AO) or serial communications (RTU, S4, S2)
 - to include an option to an instrument see section 1.9
 - to configure an installed option, access the option configuration menu (*see section 1.21.25*)
 - see section 2 for information regarding the output and control options available
6. Install the instrument
 - mount on panel, wall or hanging (*see section 1.23*)
 - adjust the brightness level according to your environmental needs (*see section 1.21.24*)

1.4 Modbus RTU definitions

The Modbus RTU protocol is a serial communications protocol, based on RS-485 bus, with 'master' / 'slave' architecture. Modbus RTU elements needed to understand this manual are described below:

- 'registers': are memory sections inside the 'slave' instrument, where the 'master' reads or writes data. Registers store numerical data. Modbus works with registers of 16 bits, which allows for numerical values from 32767 to -32767. For displays with 6 digits (display values from 999999 to -199999) registers of 32 bits are needed (*see section 1.21.5*).
- 'coils': are memory sections inside the 'slave' instrument, where the 'master' reads or writes data. Coils store binary data ('1' or '0'). Coils are typically used for alarm control and other elements with 2 states : 'on' and 'off'.
- 'functions': are actions that indicate to write or read values into 'registers' or 'coils' (*see Table 1*).
- 'errors' : Modbus is a protocol with a 'master' / 'slave' architecture and the 'master' will always expect a reply from the 'slave'. If a requested 'function', 'register' or 'coil' is not available, the 'slave' will answer with an error. See section 1.15 for a list of errors available.

Function	Name	Description
6	Write single register	writes on a single register
16	Write multiple registers	writes on multiple registers
3	Read registers	reads on multiple registers
5	Write single coil	writes on a single coil
15	Write multiple coils	writes on multiple coils
1	Read coils	reads on multiple coils


Table 1 - Modbus RTU supported functions

1.5 Typical application

The typical application for this models of large format industrial meters is to display numerical values associated to the production or industrial processes. Display value is controlled through the Modbus RTU protocol. Modbus RTU messages are sent by the bus master, usually a PLC or a SCADA system.

The instrument can also integrate relay outputs, which can be remotely controlled from the 'master' ('Full slave' working mode (see section 1.21.2)) or locally controlled by the instrument ('Process slave' working mode (see section 1.21.2)).

Additional analog outputs can be also installed . See section 2 for a list of optional output and control modules available.

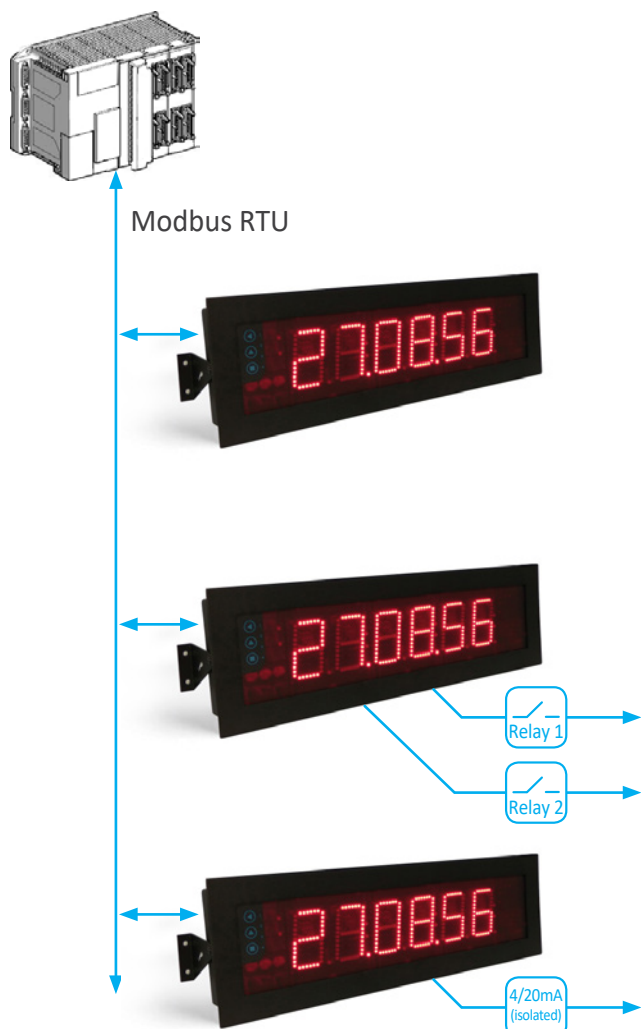


1.6 Factory configuration

Working mode	'Full slave' ('F.SLV')
Bus	
Speed	19200 bps
Format	8n1
Configuration	
Local address	1
'Watchdog'	10 seconds
'On error'	flash ('FLSh')
Data length	16 bits
Alarm control	by coil
Alarms in 'Full slave' mode	
Alarm 1	remote ('rMtE')
Alarm 2	remote ('rMtE')
Alarm 3	remote ('rMtE')
Alarms in 'Process slave' mode	
Alarms 1,2 and 3	
Active	disabled ('oFF')
Type	maximum
Setpoint	1000
Hysteresis	0 counts
Activation delay	0.0 seconds
Deactivation delay	0.0 seconds
Setpoint 2	off
Inverted relay	off
Locked alarms	off
Tools	
Fast access (Key UP)	off
Bus activity	off
Memory of maximum	off
Memory of minimum	off
Alarm 1	off
Alarm 2	off
Alarm 3	off
Address	off
'On Power Up'	
Delay	0 seconds
Alarm 1	off
Alarm 2	off
Alarm 3	off
Setpoint on bus	off
Decimal point	remote ('rMtE')
Key 'LE'	no function ('none')
Password	off
Brightness	3

1.7 Sizes and formats

1.7.1 Format B24

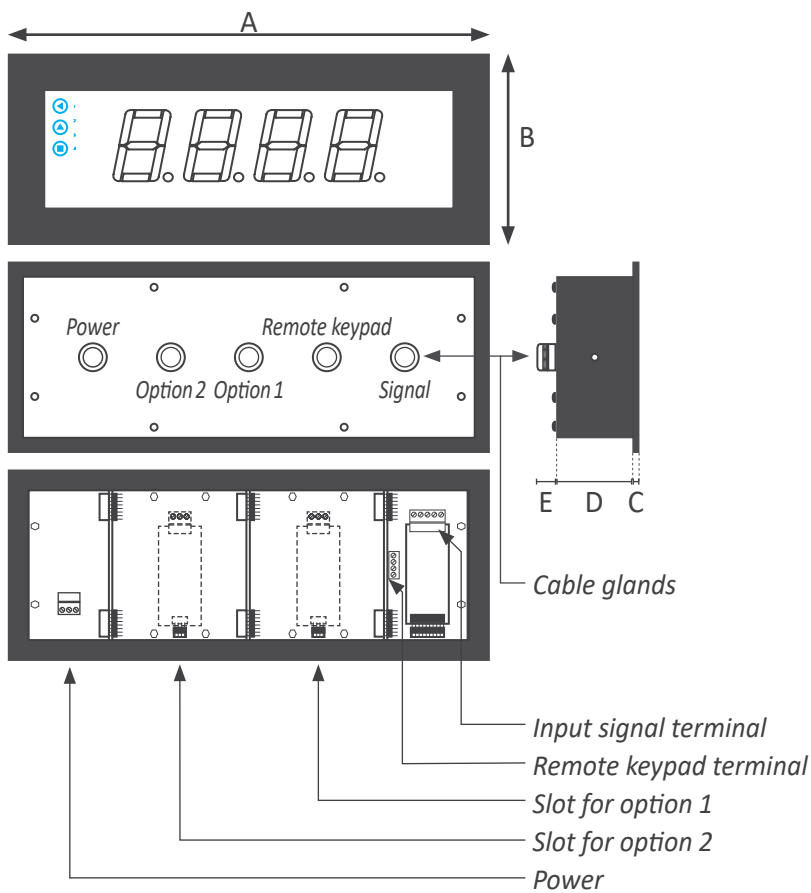


Size A	340 mm
Size B	135 mm
Size C	3 mm
Size D	55 mm
Size E	25 mm


Table 2 - Sizes B24

Cut-out G	322 mm (±1)
Cut-out F	117 mm (±1)

Table 3 - Panel cut-out B24

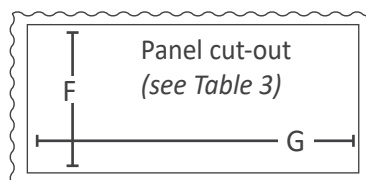

1.7.2 Format B44

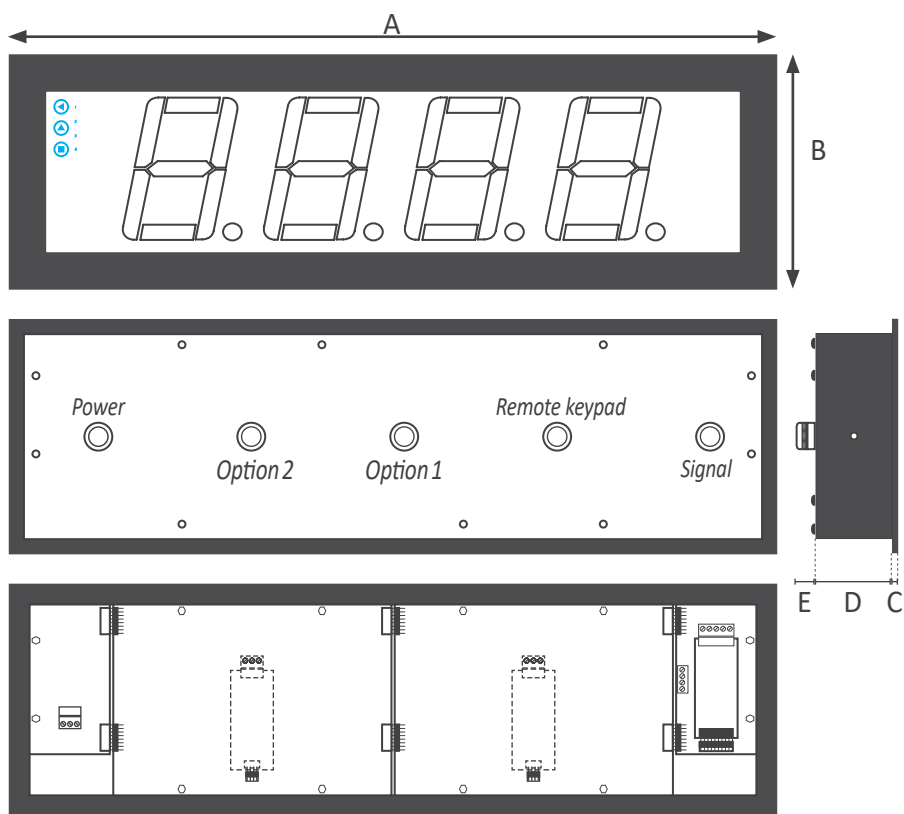


Size A	542 mm
Size B	166 mm
Size C	3 mm
Size D	55 mm
Size E	25 mm


Table 4 - Sizes B44

Cut-out G	524 mm (±1)
Cut-out F	148 mm (±1)

Table 5 - Panel cut-out B44

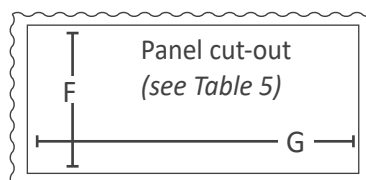

1.7.3 Format B26

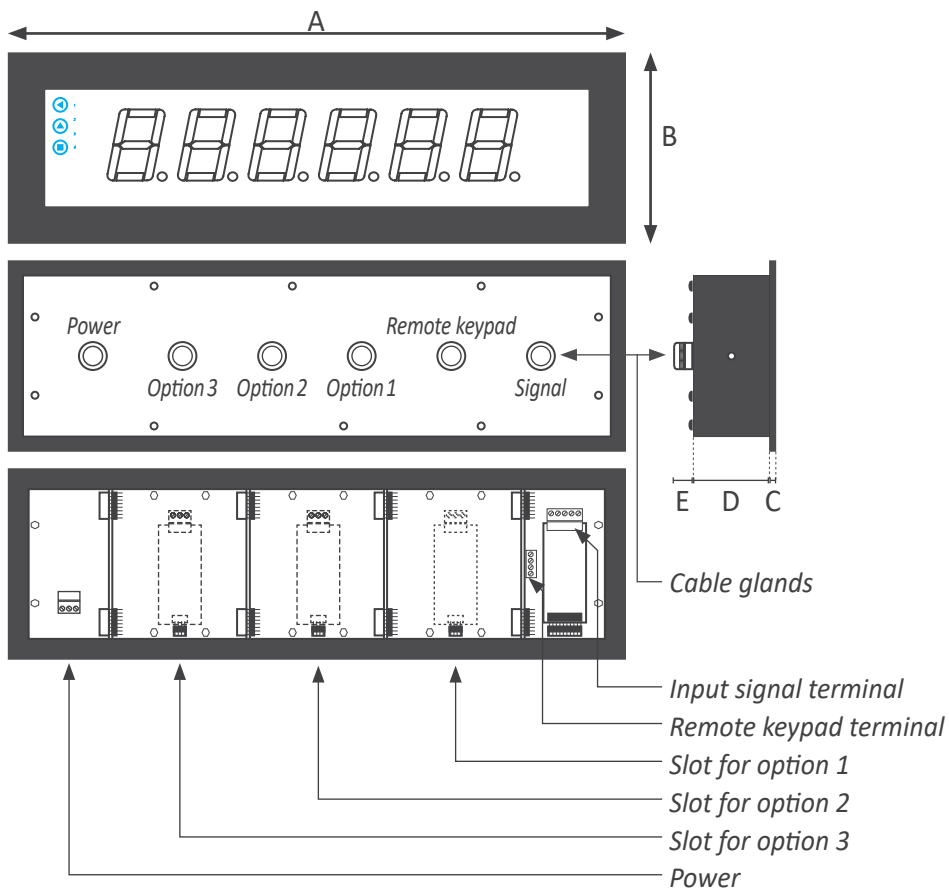


Size A	436 mm
Size B	135 mm
Size C	3 mm
Size D	55 mm
Size E	25 mm


Table 6 - Sizes B26

Cut-out G	418 mm (±1)
Cut-out F	117 mm (±1)

Table 7 - Panel cut-out B26

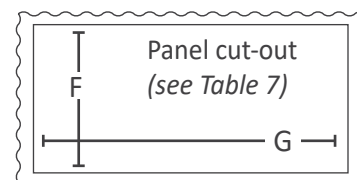

1.7.4 Format B46

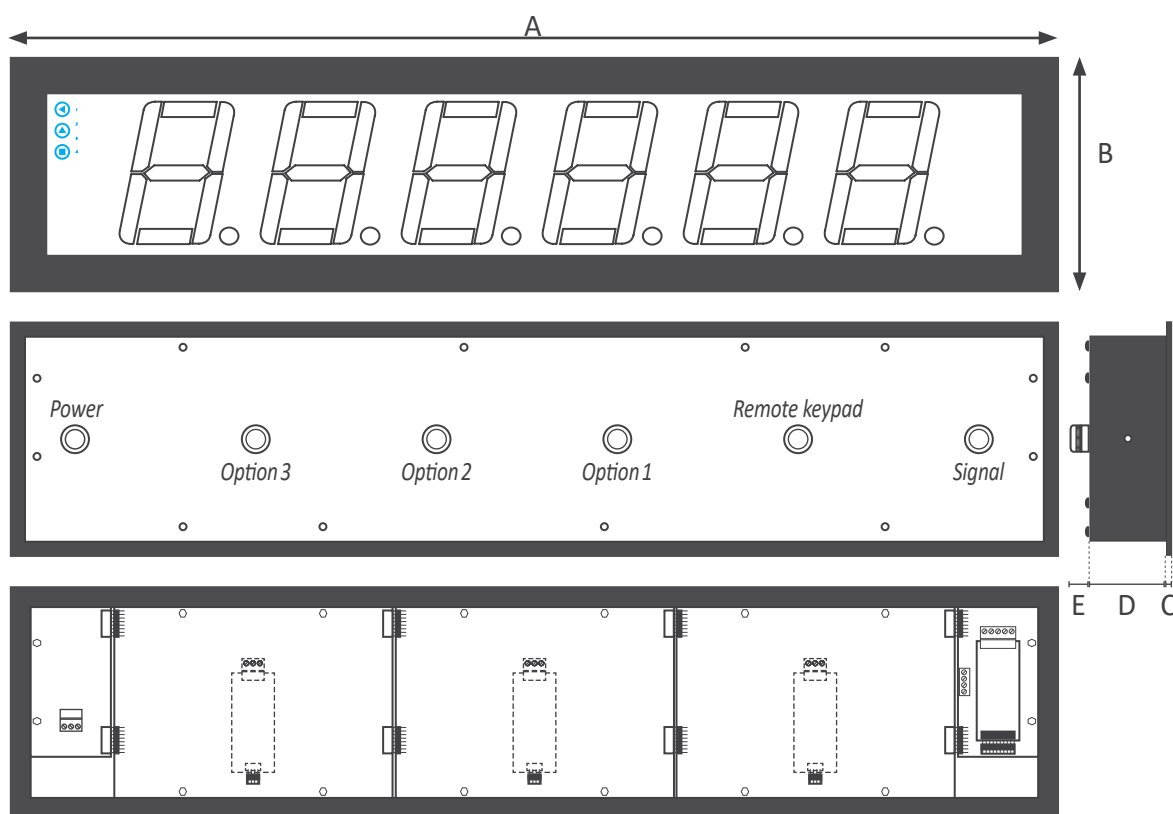


Size A	740 mm
Size B	166 mm
Size C	3 mm
Size D	55 mm
Size E	25 mm

Table 8 - Sizes B46

Cut-out G	722 mm (±1)
Cut-out F	148 mm (±1)

Table 9 - Panel cut-out B46

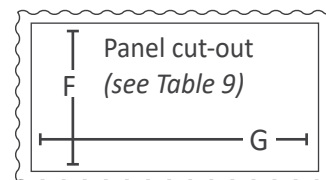


1.8 To access the instrument

To open the housing, remove the screws from the back cover. With each screw there is a metal washer and a plastic washer. Once the screws are out, remove the back cover.

The figure below shows the instrument internal structure for a B26 format. It shows the location of the 3 slots for optional output and control modules, the power terminal and the input signal terminal.

To close the instrument, place the back cover, the screws, the metal washer and the plastic washer. The plastic washer is in contact with the back cover. Confirm that the screws are correctly turning inside the internal female screws.

To ensure a correct IP65 protection tighten the back cover screws with a strength between 30 and 40 Ncm, with the help of a dynamometer screwdriver.

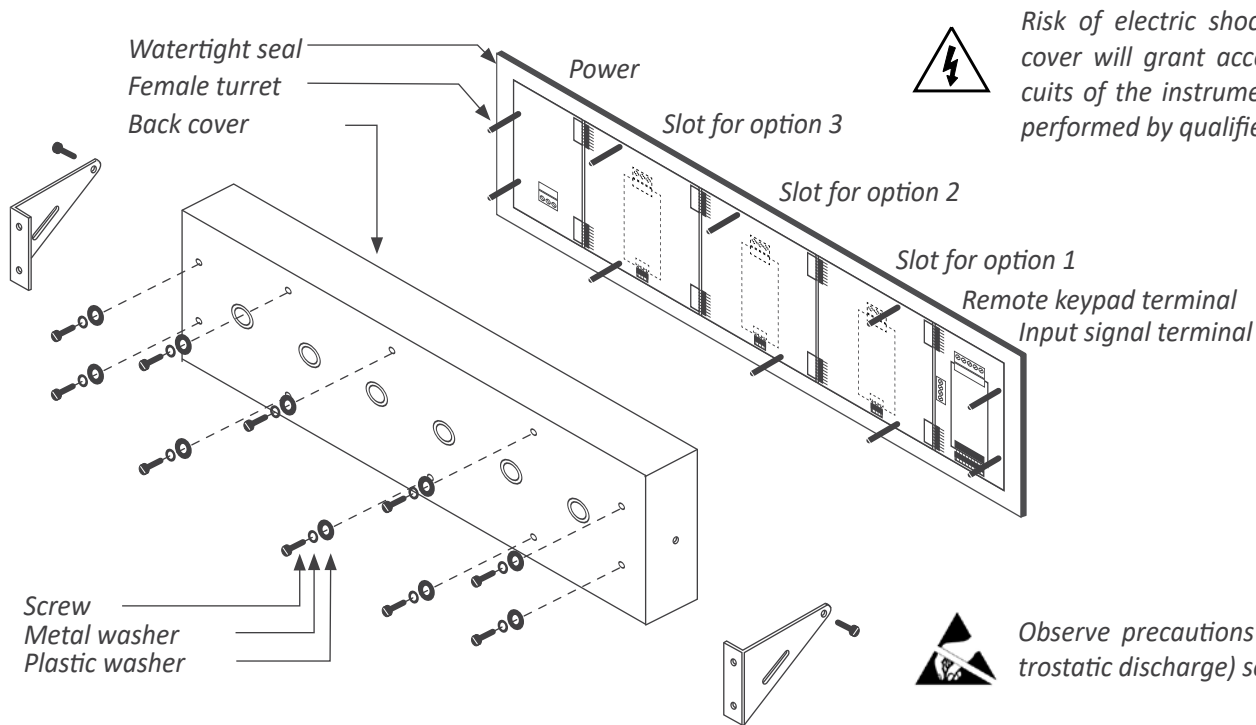


1.9 Modular system

Large format meters from Series B are designed with an internal modular architecture. The output and control modules are independent and can be installed by accessing the internal circuits of the instrument, and connecting the module to the connection jumpers of the selected slot.

Each module is provided with a cable tie to fix the module to the tie base. The input signal modules defines the instrument function and are exchangeable, switching a temperature meter to an impulse counter only by replacing the input signal module.


See section 2. for information regarding the output and control options available

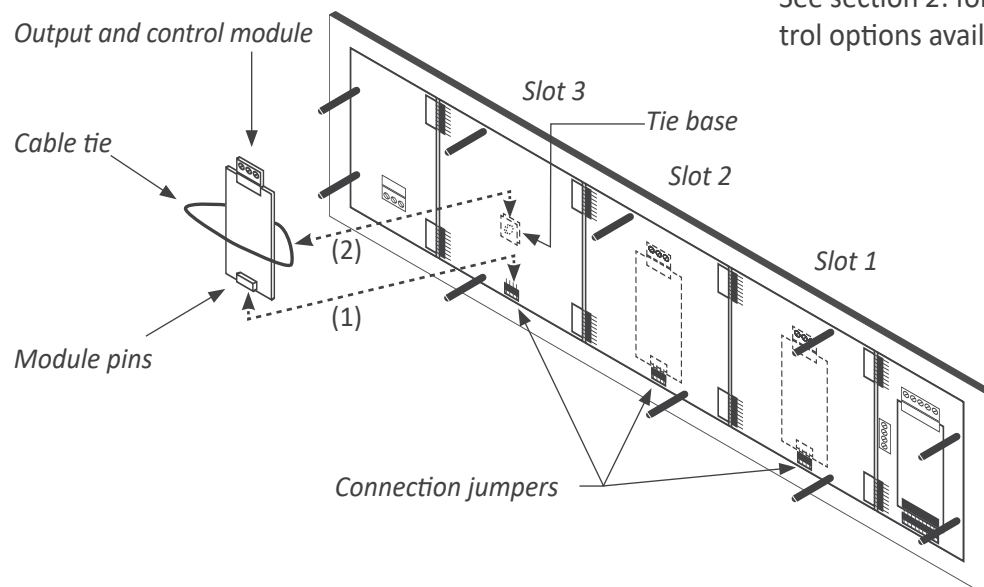


- To install an output and control module
- (1) insert the 'module pins' into the 'connection jumpers' in one of the free slots
 - (2) place the 'cable tie' into the 'tie base' and embrace the 'module' firmly, until it is fixed

1.10 Power connections and protective earth

1. Unscrew the screws from the back cover and remove the back cover (see section 1.8).
2. Pass the power cable through the power cable gland (see section 1.7).
3. Prepare the power cables so that the earth wire is 20 cm longer than the other cables (see Figure 1).

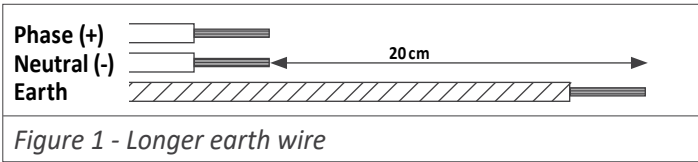


4. Connect the earth wire to the internal fixed screw 'PE' (see Figure 2) located at the inside of the back cover. The instrument internally connects the back cover metallic

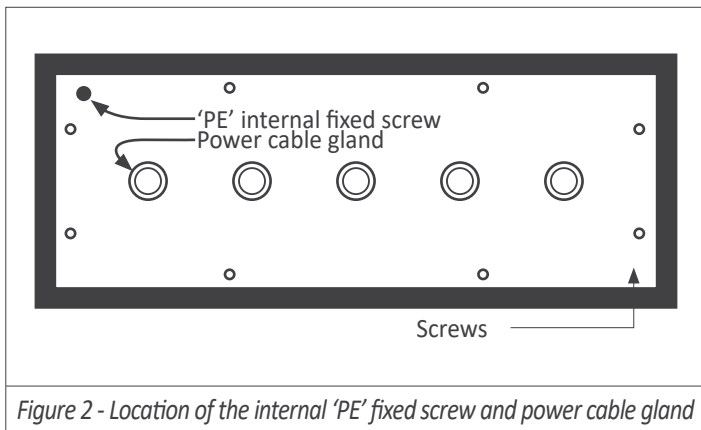


5. Connect phase and neutral (in AC power) or positive and negative (in DC power) to the internal power terminal.
6. The connections label attached to the outside of the instrument has some free space left to write the color or local code for each cable.
7. To comply with security regulation 61010-1, add to the power line a protection fuse acting as a disconnection element, easily accessible to the operator and identified as a protection device.

Power 'H'	500 mA time-lag fuse
Power 'L'	1000 mA time-lag fuse

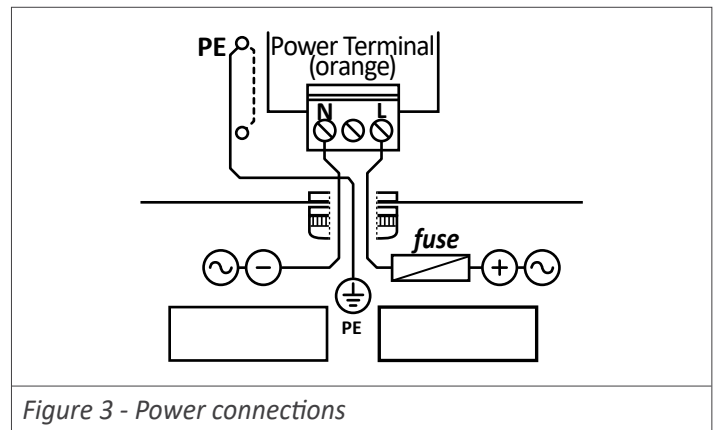


1.11 Input signal connections

1. Unscrew the screws from the back cover and remove the back cover (see section 1.8).
2. Locate the input signal terminal (see section 1.7).
3. Pass the signal cable through the signal cable gland (see section 1.7).
4. Connect the input signal cables (see Figure 4).
5. The connections label attached to the outside of the instrument has some free space left to write the color or local code for each cable.

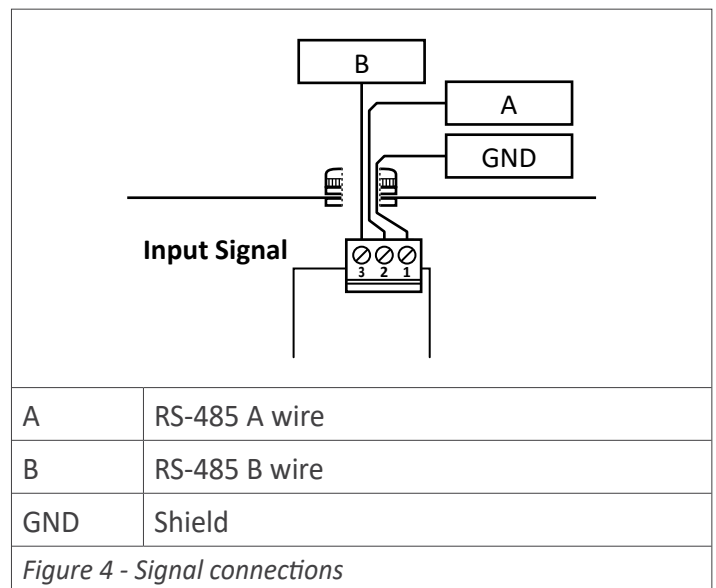

1.12 Connections for remote keypad

The 4 pin terminal located beside the input signal module allows to replicate a remote version of the front keypad. Connect 4 cables for front keys 'SQ' (■), 'UP' (▲) and 'LE' (◀) and for the common. Pass these cables through the 'remote keypad' cable gland (see section 1.7).

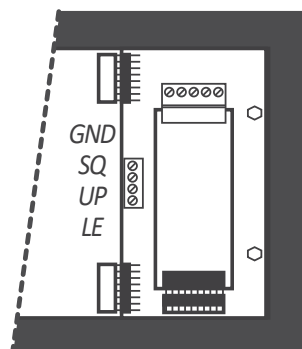

1.13 Technical specifications

Digits		Configuration	front keypad with 3 keys remote keypad (see section 3.1)
number of digits	4 or 6 (see Table 10)	Output and control options	relay output, analog retransmission, Modbus RTU, ... (see section 2)
digit	7 segments	Mechanical	
view angle	120°	IP protection	full IP65 housing
color	red or green	mounting	panel, wall , hanging (see section 1.23)
digit height	(see Table 10)	connections	cable gland outputs internal plug-in screw terminals
Reading		housing material	textured iron, black painted methacrylate front filter (see Table 10)
max., min.	(see Table 10)	weight	(see section 1.7)
decimal point	X.X.X.X.X.	front sizes	(see section 1.7)
Protocol	Modbus RTU	panel cut-out	(see section 1.7)
function	slave within a Modbus RTU bus	depth	(see section 1.7)
speed	from 38.400 bps to 600 bps	Temperature	
data formats	8n1, 8e1, 8o1, 8n2	operation	from 0 to +50 °C
addresses	1 to 247	storage	from -20 to +70 °C
bus terminator	not included	warm-up time	15 minutes
wire section	max. 0.5 mm ²		
Watchdog	configurable from 1 to 120 sec.		
Errors	communication loss with the master		
Power			
power 'H'	85 to 265 Vac and 120 to 370 Vdc isolated (isolation 2500 Vac)		
power 'L'	11 to 36 Vdc isolated (isolation 1500 Vdc)		
consumption	(see Table 10)		
fuses	(see section 1.10)		
wire section	max. 2.5 mm ²		

	Format B24	Format B44	Format B26	Format B46
Number of digits	4	4	6	6
Digit height	60 mm	100 mm	60 mm	100 mm
Reading distance	25 meters	50 meters	25 meters	50 meters
Slots for output and control options	2	2	3	3
Maximum reading	9999		999999	
Minimum reading	-1999		-199999	
Consumption (without options installed)	3 W	5.25 W	3.5 W	5.5 W
Consumption (with options installed)	5 W	6.75 W	5,5 W	7 W
Weight	2200 gr.	2500 gr.	3500 gr.	4500 gr.

Table 10 - Technical specifications associated to format

1.14 Functions included

Functions included		Section
Local or remote alarms	yes, configurable	1.21.8
Address	configurable	1.21.3
Watchdog	yes, configurable	1.21.4
Watchdog error	yes, configurable	1.21.4
Registers	16 or 32 bits	1.21.5
Remote alarms	by 'coil' or 'register'	1.21.6
Local alarms	simple or double setpoint activation delays deactivation delays hysteresis inverted relays locked alarms	1.21.8
Fast access menu	yes, configurable	1.21.11
'Bus activity'	yes	1.21.12
'On Power Up'	yes	1.21.13
'Setpoint on bus'	yes	1.21.14
'Decimal point'	yes	1.21.15
Key 'LE'	yes	1.21.20
Password	configuration locked	1.21.21
Brightness	configurable, 5 levels	1.21.24

Table 11 - Functions included

1.15 Messages and errors

Error messages related to the local instrument are shown on display, in flash mode (see Table 12). Examples given are for instrument with 6 digit formats. Error messages related to the protocol are sent as response frames through the communications bus (see Table 13).

Messages and errors on display	
'Err.1'	incorrect password.
'Err.2'	at 'oPt.X' menu entry. Installed module is not recognized.
'Err.W'	'Watchdog' error
'999999'	+ flashing mode. Reading is in overrange.
'-199999'	+ flashing mode. Reading is in underrange.

Table 12 - Messages and error codes for local instrument

Messages and errors on the Modbus RTU protocol	
1	'Illegal function'. Function requested is not available.
2	'Illegal data'. Register or coil requested is not available.

Table 13 - Messages and error codes for the Modbus RTU protocol

1.16 Start up sequence

The instrument follows the sequence indicated below at start-up after a power loss :

- alarm status according to configuration (see section 1.21.13)
- start up delay according to configuration (see section 1.21.13)
- all registers and coils initialized to value '0'
 - display set to '0'
- detection of the active working mode 'Full slave' or 'Process slave' (see section 1.21.2)
 - in 'Full slave' mode the alarm status is set as explained in '1.' and alarm registers are set to '0'
 - in 'Process slave' mode alarm configuration (setpoint, etc) is compared with display value ('0') and each alarm activates or deactivates according to the result of the comparison
- waits for data reception through the communications bus

1.17 Registers and functions : 16 bits 'Process slave'

List of available registers (see Table 14) and available functions (see Table 15) for instruments configured in 'Process slave' mode and 16 bits data length.

- accessing a function not listed in the table, returns error 1 'Illegal Function'.
- accessing a register not listed in the table, returns error 2 'Illegal Data Address'.
- working with 16 bit registers allows for codification of numbers between 32767 and -32767. To work with numbers up to 999999 / -199999, configure registers for 32 bits data (see section 1.21.5).
- registers Setpoint 1, Setpoint 2 and Setpoint 3 are disabled by default (setpoint value is modified through the front keypad). To enable access to read and write these registers through the bus, while staying in 'Process slave' mode, see section 1.21.14.
- writing to the setpoint registers when they are disabled returns error 2 'Illegal Data Address'.
- modifying a setpoint value manually from the front keypad, does not update the value stored at the setpoint register. Reading the setpoint register does not access the setpoint value configured in the instrument, but the last written value on the register.
- after power loss, the instrument starts up with all registers initialized to '0' (see section 1.16).
- the 'Resolution' register contains a numerical value indicating the number of decimal places on display. Valid values from 0 to 5. Writing value 2 lights the decimal point at position XXXX.XX. Non valid values are discarded and no error message is generated.
- all registers are read and write registers.
- access to reserved registers does not generate error messages.

Example - to update the display of the instrument to a value of 432.1, write onto 'Display' register the number '4321' and write onto 'Resolution' register the number '1'.

Register 'Display' : '4321'

Register 'Resolution' : '1'

Register number	Name
0	Display
1	Resolution
2	Setpoint 1*
3	Setpoint 2*
4	Setpoint 3*
5	Reserved

Table 14 - Registers in 16 bits and 'Process slave' mode

Function number	Name
6	Write single register
16	Write multiple registers
3	Read registers

Table 15 - Functions in 16 bits and 'Process slave' mode

1.18 Registers and functions : 16 bits 'Full Slave'

List of available registers (see Table 16), available 'coils' (see Table 17) and available functions (see Table 18) for instruments configured in 'Full slave' mode and 16 bits data length.

- accessing a function not listed in the table, returns error 1 'Illegal Function'.
- accessing a register not listed in the table, returns error 2 'Illegal Data Address'.
- working with 16 bit registers allows for codification of numbers between 32767 and -32767. To work with numbers up to 999999 / -199999, configure registers for 32 bits data (see section 1.21.5).
- after power loss, the instrument starts up with all registers initialized to '0' (see section 1.16).
- the 'Resolution' register contains a numerical value indicating the number of decimal places on display. Valid values from 0 to 5. Writing value 2 lights the decimal point at position XXXX.XX. Non valid values are discarded and no error message is generated.
- alarms can be controlled using 'Alarm' registers or 'coils'. By default, alarms are controlled by coils (see Table 17). To enable the 'Alarm' register see section 1.21.6. The 'Alarm' register is made of bits. Bit '0' controls the state of Alarm 1, bit '1' control the state of Alarm 2 and bit '2' controls the state of Alarm 3
- all registers are read and write registers.
- access to reserved registers does not generate error messages.

Example - to update the display of the instrument to a value of 432.1, write onto 'Display' register the number '4321' and write onto 'Resolution' register the number '1'.

Register 'Display' : '4321'

Register 'Resolution' : '1'

Register number	Name
0	Display
1	Resolution
2	Alarms
3	Reserved
4	
5	

Table 16 - Registers in 16 bits and 'Full Slave' mode

'Coil' number	Name
0	Alarm 1
1	Alarm 2
2	Alarm 3
3	Reserved
4	
5	
6	
7	

Table 17 - 'Coils' in 16 bits and 'Full Slave' mode

Function number	Name
6	Write single register
16	Write multiple registers
3	Read registers
5	Write single 'coil'
15	Write multiple 'coils'
1	Read 'coils'

Table 18 - Functions in 16 bits and 'Full Slave' mode

1.19 Registers and functions : 32 bits ‘Process slave’

List of available registers (see Table 19) and available functions (see Table 20) for instruments configured in ‘Process slave’ mode and 32 bits data length.

- accessing a function not listed in the table, returns error 1 ‘Illegal Function’.
- accessing a register not listed in the table, returns error 2 ‘Illegal Data Address’.
- working with 16 bit registers allows for codification of numbers between 32767 and -32767. If higher or lower values are codified into a register, it will force the instrument to overrange or underrange the reading.
- registers Setpoint 1, Setpoint 2 and Setpoint 3 are disabled by default (setpoint value is modified through the front keypad). To enable access to read and write these registers through the bus, while staying in ‘Process slave’ mode, see section 1.21.14.
- writing to the setpoint registers when they are disabled returns error 2 ‘Illegal Data Address’.
- sending values higher than 999999 (or lower than -199999) to the setpoint registers will save the value 999999 (or -199999)
- modifying a setpoint value manually from the front keypad, does not update the value stored at the setpoint register. Reading the setpoint register does not access the setpoint value configured in the instrument, but the last written value on the register.
- after power loss, the instrument starts up with all registers initialized to ‘0’ (see section 1.16).
- registers of 32 bits are written with function ‘Write Multiple Registers’. Both registers (‘high’ and ‘low’) must be written with the same write function. If write function is received only for one of the registers (‘high’ or ‘low’) the instrument will discard the write function. No error code will be generated.
- the ‘Resolution’ register contains a numerical value indicating the number of decimal places on display. Valid values from 0 to 5. Writing value 2 lights the decimal point at position XXXX.XX. Non valid values are discarded and no error message is generated.
- all registers are read and write registers.
- access to reserved registers does not generate error messages.

Register number	Name
0	Display Low
1	Display High
2	Resolution Low
3	Resolution High
4	Setpoint 1 Low
5	Setpoint 1 High
6	Setpoint 2 Low
7	Setpoint 2 High
8	Setpoint 3 Low
9	Setpoint 3 High
10	Reserved
11	Reserved

Table 19 - Registers in 32 bits and ‘Process slave’ mode

Function number	Name
16	Write multiple registers
3	Read registers

Table 20 - Functions in 32 bits and ‘Process slave’ mode

Example - to update the display of the instrument to a value of 6543.21, it is needed to work with 32 bits registers. Convert the value to hex format and write to the ‘Display high’ register the first 16 bits and to the ‘Display low’ register the last 16 bits.

654321 decimal translated to hexadecimal is 0x0009FBF1
 register ‘display high’ = 0x0009 = ‘9’
 register ‘display low’ = 0xFBF1 = ‘64497’

When programming, this is directly achieved with functions DIV (integer division) and MOD (rest of integer division).

register ‘display high’ = 654321 DIV 65536 = 9
 register ‘display low’ = 654321 MOD 65536 = 64497
 register ‘resolution high’ = 0
 register ‘resolution low’ = 2

1.20 Registers and functions : 32 bits 'Full Slave'

List of available registers (see Table 21), available 'coils' (see Table 22) and available functions (see Table 23) for instruments configured in 'Full slave' mode and 32 bits data length.

- accessing a function not listed in the table, returns error 1 'Illegal Function'.
- accessing a register not listed in the table, returns error 2 'Illegal Data Address'.
- working with 16 bit registers allows for codification of numbers between 32767 and -32767. If higher or lower values are codified into a register, it will force the instrument to overrange or underrange the reading.
- after power loss, the instrument starts up with all registers initialized to '0' (see section 1.16).
- registers of 32 bits are written with function 'Write Multiple Registers'. Both registers ('high' and 'low') must be written with the same write function. If write function is received only for one of the registers ('high' or 'low') the instrument will discard the write function. No error code will be generated.
- the 'Resolution' register contains a numerical value indicating the number of decimal places on display. Valid values from 0 to 5. Writing value 2 lights the decimal point at position XXXX.XX. Non valid values are discarded and no error message is generated.
- alarms can be controlled using 'Alarm' registers or 'coils'. By default, alarms are controlled by coils(see Table 17). To enable the 'Alarm' register see section 1.21.6. The 'Alarm' register is made of bits. Bit '0' controls the state of Alarm 1, bit '1' control the state of Alarm 2 and bit '2' controls the state of Alarm 3
- all registers are read and write registers.
- access to reserved registers does not generate error messages.

Example - to update the display of the instrument to a value of 6543.21, it is needed to work with 32 bits registers. Convert the value to hex format and write to the 'Display high' register the first 16 bits and to the 'Display low' register the last 16 bits.

*654321 decimal translated to hexadecimal is 0x0009FBF1
register 'display high' = 0x0009 = '9'
register 'display low' = 0xFBF1 = '64497'*

Register number	Name
0	Display Low
1	Display High
2	Resolution Low
3	Resolution High
4	Alarms Low
5	Alarm as High
6 a 11	Reserved

Table 21 - Registers in 32 bits and 'Full slave' mode

'Coil' number	Name
0	Alarm 1
1	Alarm 2
2	Alarm 3
3	Reserved
4	
5	
6	
7	

Table 22 - 'Coils' in 32 bits and 'Full Slave' mode

Function number	Name
16	Write multiple registers
3	Read registers
5	Write single 'coil'
15	Write multiple 'coils'
1	Read 'coils'

Table 23 - Functions in 32 bits and 'Full Slave' mode

When programming, this is directly achieved with functions DIV (integer division) and MOD (rest of integer division).

*register 'display high' = 654321 DIV 65536 = 9
register 'display low' = 654321 MOD 65536 = 64497
register 'resolution high' = 0
register 'resolution low' = 2*

1.21 Configuration

1.21.1 How to operate the menus

The instrument has two menus accessible to the user :

‘*Configuration menu*’ (key ‘SQ’) (■)

‘*Fast access*’ menu (key ‘UP’) (▲)

Configuration menu

The ‘*configuration menu*’ modifies the configuration parameters to adapt the instrument to the application needs. To access the ‘*configuration menu*’ press for 1 second the ‘SQ’ (■) key. This access can be blocked by activating the ‘**Pass-word**’ (‘PASS’) function. While operating the ‘*configuration menu*’, the alarm status is ‘hold’ to the status it had before accessing the menu, and the output and control modules remain in ‘*error*’ state. When leaving the ‘*configuration menu*’, the instrument applies a system reset, followed by a brief disconnection of the alarms and the output and control modules. Functionality is then recovered.

For a detailed explanation on the ‘*configuration menu*’ see the following sections, and for a full view of the ‘*configuration menu*’ see section 1.22.

‘Fast access’ menu

The ‘*fast access*’ menu is an operator configurable menu, providing fast and direct access to the most usual functions of the instrument with a single key pad stroke. Press key ‘UP’ (▲) to access this menu.

See section 1.21.11 for a list of selectable functions for the ‘*fast access*’ menu in this instrument. The ‘**Password**’ (‘PASS’) function does not block access to this menu. Accessing and modifying parameters in the ‘*fast access*’ menu does not interfere with the normal functionality of the instrument, and it does not generate any system reset when validating the changes.

Operating with the front keypad inside the menus

Key ‘SQ’ (■) - press the ‘SQ’ (■) key for 1 second to access the ‘*configuration menu*’. Inside the menu, the ‘SQ’ (■) key acts as an ‘ENTER’. It enters into the menu option selected, and when entering a numerical value, it validates the number.

Key ‘UP’ (▲) - press the ‘UP’ (▲) key to access the ‘*fast access*’ menu. Inside the menu, the ‘UP’ (▲) key sequentially moves through the available parameters and menu entries. When entering a numerical value, it modifies the digit selected by increasing its value to 0, 1, 2, 3, 4, 5, 6, 7, 8, 9.

Key ‘LE’ (◀) - press the ‘LE’ (◀) key to activate the configured special functions associated to this key. Inside the menu, the ‘LE’ (▲) acts as an ‘ESCAPE’. It leaves the selected menu level and eventually, by leaving all menu levels, it leaves from the configuration menu. Then changes are applied and the instrument is back to normal function. When entering a numerical value, it selects the active digit, and the value is then modified by key ‘UP’ (▲).

‘Rollback’

After 30 seconds without interaction from the operator, the instrument will rollback and leave the ‘*configuration menu*’ or the ‘*fast access*’ menu. All changes will be discarded.

Instruments with 4 and 6 digits

The configuration menus included in this document show values for a 6 digit instrument. In case of 4 digit instruments, note that maximum reading values should be 9999 instead of 999999 to 9999 and minimum reading values should be -1999 instead of -199999.


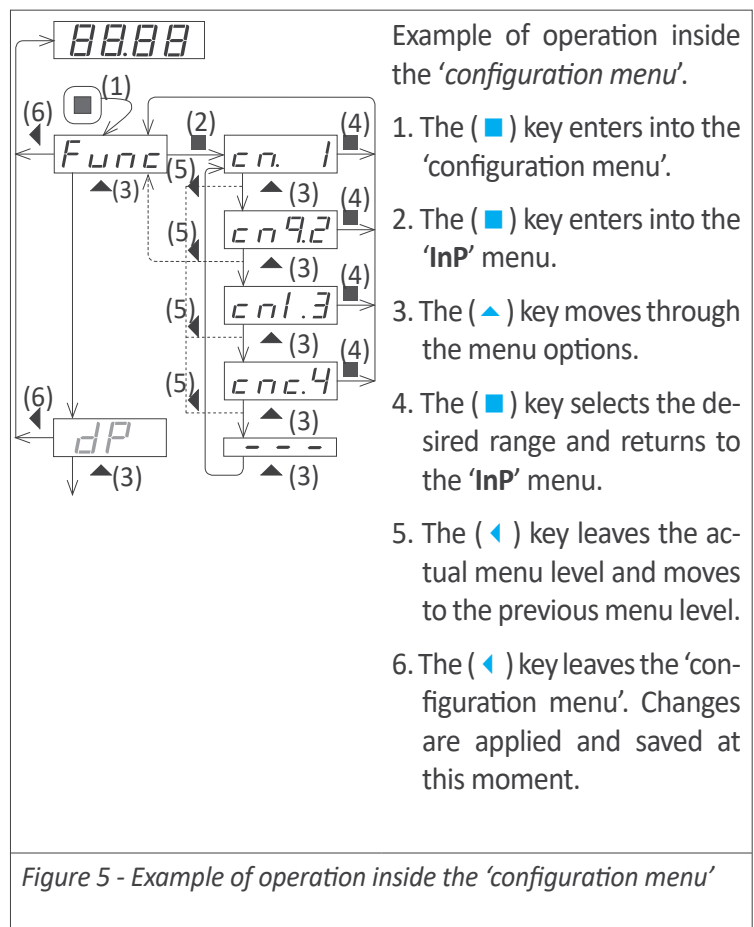


Figure 5 - Example of operation inside the ‘*configuration menu*’

1.21.2 Initial set-up

Press 'SQ' (■) for 1 second to access the 'configuration menu'. For a description on how to operate inside the menus see section 1.21.1. For a full vision of the 'configuration menu' structure see section 1.22.

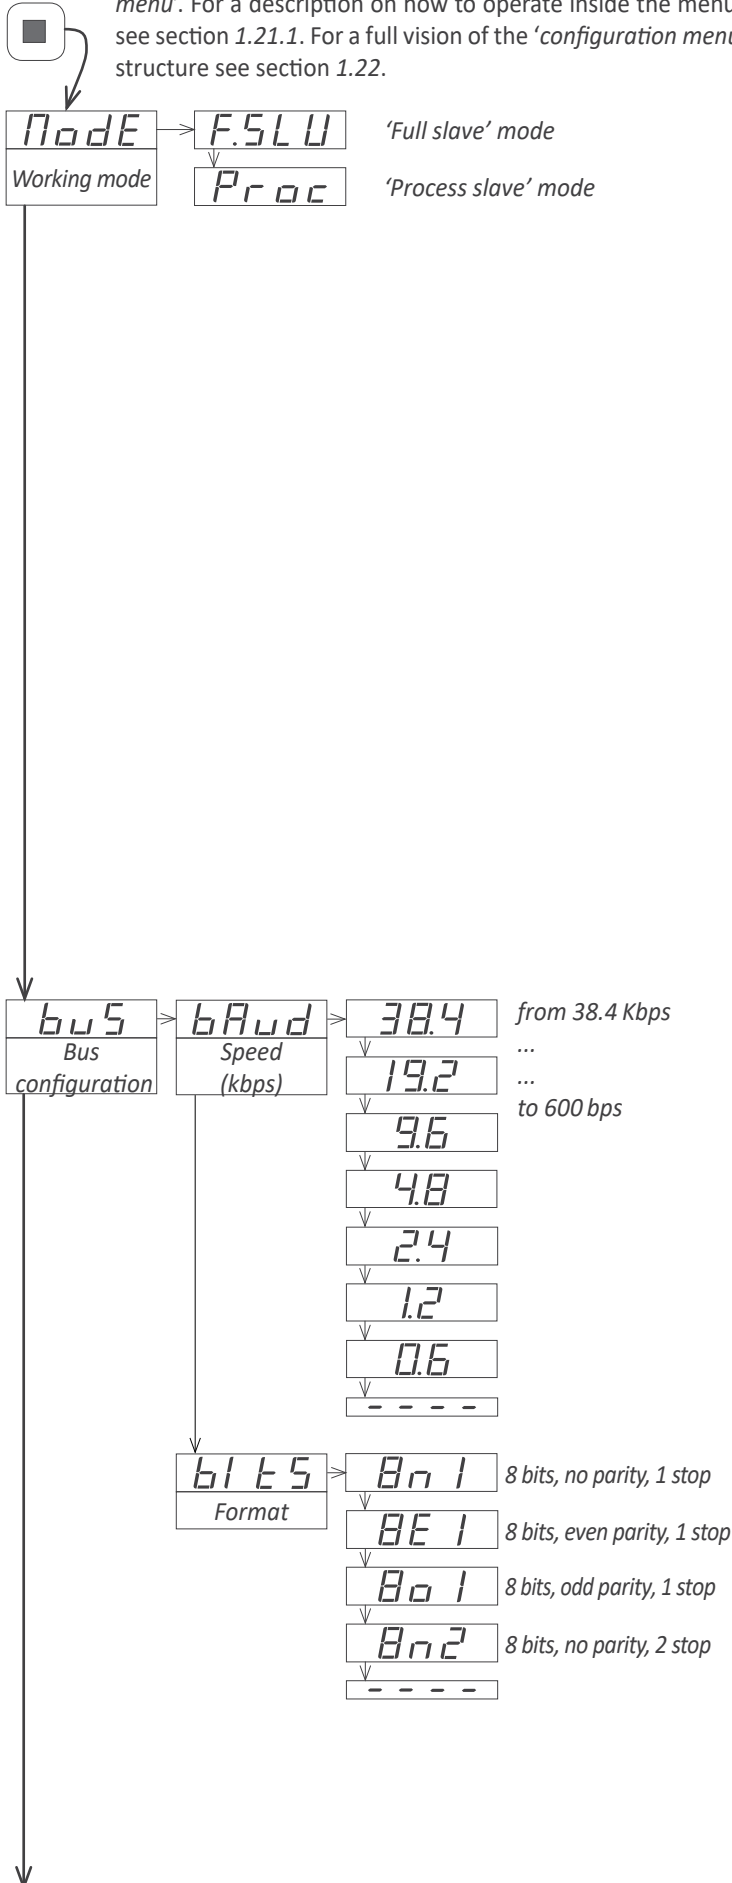

To configure the initial set up of the instrument, select the working mode and configure the bus parameters.

The instrument has 2 working modes named 'Full slave' and 'Process slave'. In both modes, the reading value is received from the communications bus. The differences between modes are related to how the alarms are controlled.

At the 'Working mode' ('MODE') parameter, select one of the working modes.

- select 'Full slave' to control the alarms directly from the communications bus, by writing to the internal instrument registers. Analog outputs and other output and control modules are controlled locally from the instrument.
- select 'Process slave' to control the alarms locally from the instrument, by manually configuring the setpoint and other alarm parameters. Analog outputs and other output and control modules are controlled locally from the instrument.

Configuration menus for both modes are slightly different. The following sections will mention when a parameter applies only to one of the modes.

At the 'Bus configuration' ('buS') menu configure the bus speed and the bus data format.

- at the 'Speed' ('bAud') parameter select the bus speed, in kbps.
- at the 'Format' ('bltS') parameter select the bus format between '8n1', '8e1', '8o1' and '8n2'.

1.21.3 Addresses

The instrument can be assigned any address between 1 and 247.

1.21.4 'Watchdog' function

The 'watchdog' function activates an error state in case of loss of communication with the 'master'. To configure the 'watchdog' indicate the maximum time accepted to wait between two frames received. If the configured time is exceeded, the instrument activated the 'watchdog error'. When a correct frame is received, the 'watchdog' timer is reset.

Frames that can reset the 'watchdog' timer are those addressed to the 'slave' instrument. These frames must conform to the Modbus RTU protocol and have a correct CRC.

If the function or register or coil indicated in the frame is not correct, the 'slave' instrument will still reset the 'watchdog' timer. It will also reply with the corresponding error message.

The internal alarms of the instrument can be associated to the 'watchdog'. In case of 'watchdog' activation, the associated alarm will also activate (*see section 1.21.8*).

Display can also be configured to show an error message in case of 'watchdog' error. It can be configured for flashing, dash ('-----') or to show message 'Err.W'.

1.21.5 16 bits or 32 bits registers

As a standard, Modbus RTU protocol is designed to work with registers of 16 bits. This allows to work with numerical values between 32767 and -32767. In order to work with numerical values up to 999999 and -199999, larger register of 32 bits are needed (*see section 1.21.5*). A 32 bits register is read and written as if it was composed of 2 registers of 16 bits.

To write on 32 bits registers use function 16 'Write multiple registers' and to read on 32 bits registers use function 3 'Read registers'. Working with 32 bits registers has the following limitations:

- registers of 32 bits (2 registers of 16 bits) must be written or read using the same single function. It is not allowed to write 16 bits with a function and then write the following 16 bits in the next function.
- in case of writing (or reading) only a part of a 32 bits register (only first 16 bits or last 16 bits) the instrument will discard the write (or read) function. Instrument will not transmit error code.

Available 'functions', 'registers' and 'coils' for each mode are explained at sections *1.17, 1.18, 1.19 and 1.20*.


1.21.6 Alarm control : registers and 'coils'

In 'Full slave' mode, the 'master' controls the activation and deactivation of each individual alarm in the 'slave' instrument, by sending write functions to the appropriate registers or coils. By default, alarm control is performed by writing to coils. To switch to alarm control by writing to registers, configure the menu 'Alarm control' ('**AL.ct**').

Alarm control by coil or register is selectable but only one type of control can be active.

Available 'functions', 'registers' and 'coils' for each mode are explained at sections *1.17, 1.18, 1.19 and 1.20*.

1.21.7 Configuration menu

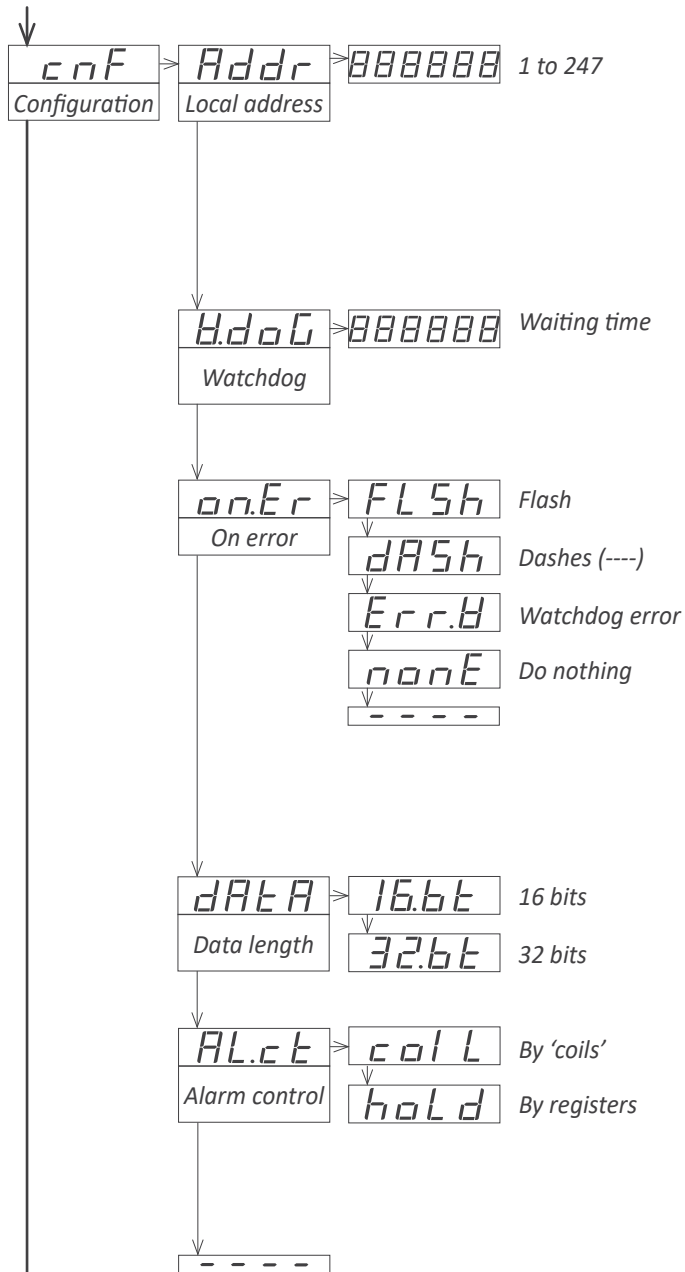

At the 'Configuration' ('cnF') menu, configure the parameters associated to the instrument function, such as the local address, the 'watchdog' time and error behavior, the data length and the alarm control.

- at the 'Local address' ('Addr') parameter configure the local address of the instrument. Values from 1 to 247.
- at the 'Watchdog' ('W.doG') parameter configure the maximum waiting time between frames, in seconds. Select '0' to disable the 'watchdog'. Maximum value 120 seconds. In case of watchdog error activation, the function 'on.Er' will be triggered (see section 1.21.4).
- at the 'On error' ('on.Er') parameter configure the action in case of watchdog error:
 - select 'Flash' ('FLSh') to activate the flash on display
 - select 'Dashes' ('dASH') to activate dashes ('----') on display
 - select 'Watchdog error' ('Err.W') to activate the message 'Err.W' on display.
 - select 'do nothing' ('nonE') to perform no action.
- at the 'Data length' ('dAtA') parameter configure the instrument to work with 16 bit or 32 bit registers. By default, it works with 16 bit registers (see section 1.21.5).
- the 'Alarm control' ('AL.ct') parameter applies only in 'Full Slave' mode. Select 'coil' or 'hold' to configure alarm control by writing to coils or to registers (see section 1.21.6).

1.21.8 Alarms

The instrument manages 3 independent internal alarms, each one controlling the activation of an optional relay, transistor or control SSR output. Optional modules (see section 2) are installed at the free slots inside the instrument (see section 1.7). B24 and B44 formats have 2 free slots for output and control modules, while B26 and B46 formats have 3 free slots for output and control modules. The instrument has 3 front leds that reflect the state of the 3 internal alarms. These leds are only for local help during installation, as they are not appropriate for long distance reading.

Each alarm controls the activation of the relay, transistor or control SSR installed on its associated slot, and the front led.

• **Alarms in 'Full slave' mode**

In 'Full slave' mode, the alarms are controlled through the bus. By default the control is performed by writing to the 'coils'. to activate control by writing to 'registers' see section (see section 1.21.6).

In 'Full slave' mode an alarm can be associated to the watchdog. This alarm will activate when the watchdog error activates (see section 1.21.4). This function allows to activate a relay to inform about loss of communication.

• **Alarms in 'Process slave' mode**

In 'Process slave' mode, the alarms are controlled locally at the instrument, and the operator must manually configure them.

Each alarm has several parameters for configuration, starting with the usual setpoint, hysteresis and maximum (alarm active when reading is higher than setpoint) or minimum (alarm active when reading is lower than minimum) alarm types (see Figure 6).

Each alarm can configure independent activation and deactivation delays. These delays affect the alarm as a whole, and the delay will affect the front led and the associated relay.

Configuring a second setpoint creates 'windowed alarms'. The windowed alarm controls with a single relay output if the reading is inside or outside the values defined (see Figure 7).

Activate the 'inverted relay' function to invert the activation logic of the associated relay.

Activate the 'locked alarms' function will force the operator to interact with the instrument when an alarm has been activated. Once activated, the alarm will remain locked at active state, even if the reading returns to a value below setpoint, until the operator manually unlocks the alarms pressing the front key 'LE' (or the remote key 'LE', see section 3.1).

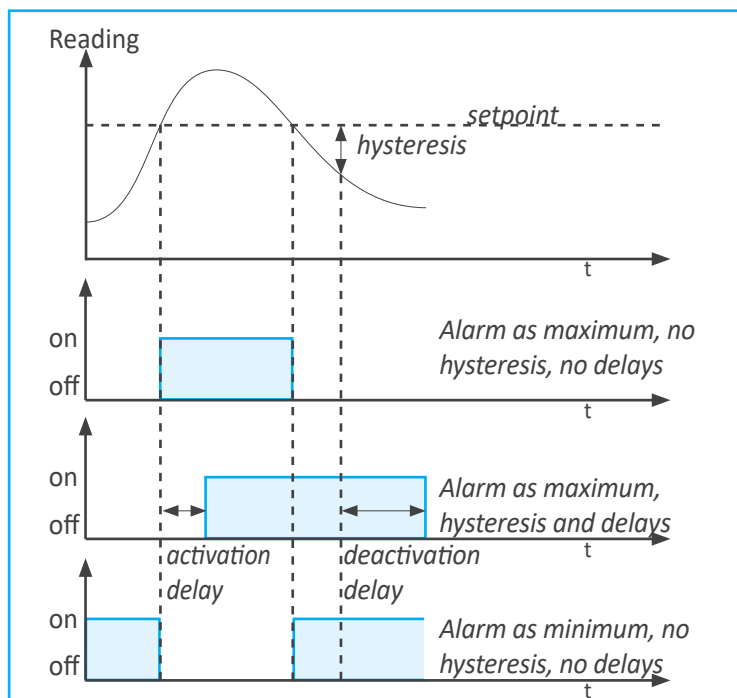


Figure 6 - Examples of alarm with 1 setpoint


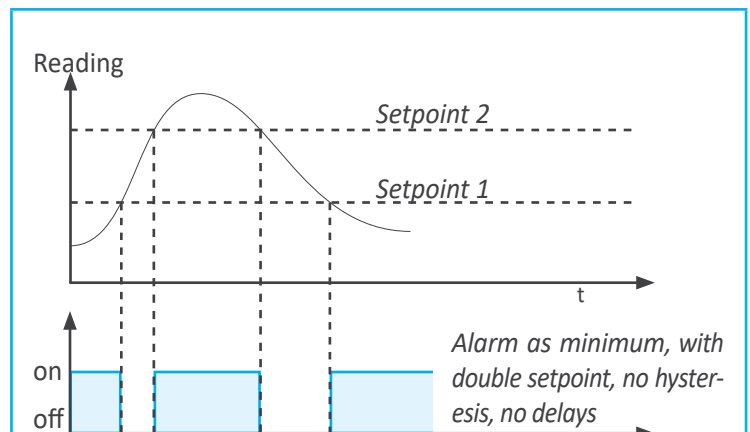


Figure 7 - Example of alarm with 2 setpoints

1.21.9 Alarms configuration menu for 'full slave'

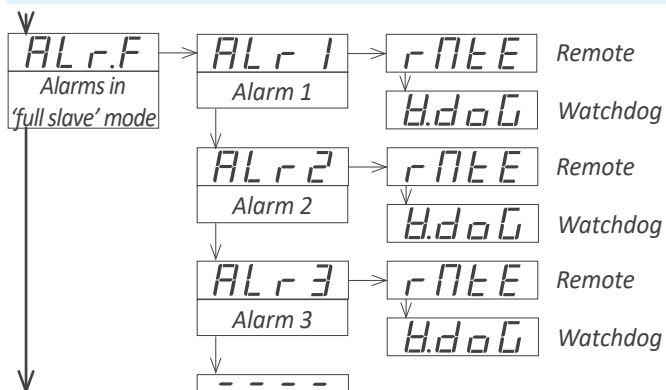


Menu available only in 'Full slave' mode. In 'Full slave' mode alarms are remotely controlled from the bus.

By default all alarms are set to 'remote' ('rMte') when the 'full slave' mode is selected. Select the 'Watchdog' ('W.doG') value to any alarm to activate in case of watchdog error.

For more information see section 1.21.8.

1.21.10 Alarms configuration menu for 'process slave'

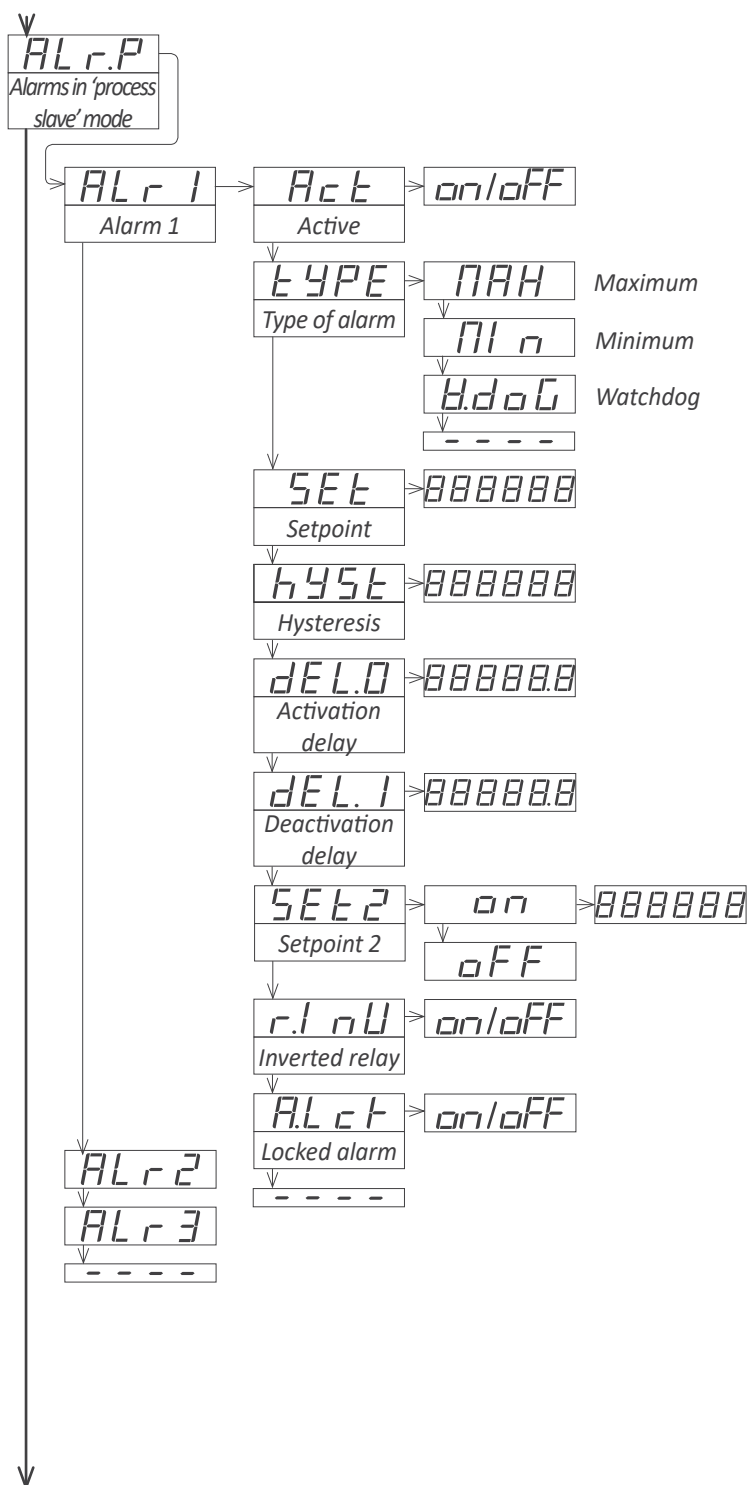

Menu available only in 'Process slave' mode. In 'process slave' mode, alarms are locally controlled from the instrument. Locally configure the alarm parameters for each alarm. For more information see section 1.21.8. At the alarm menu ('ALr1', 'ALr2' or 'ALr3') configure the following parameters:

- at the 'Active' ('Act') parameter select 'on'
- at the 'Type of alarm' ('TypeE') parameter select 'MAX' for maximum alarm (activates when reading is higher than setpoint), or 'Min' for minimum alarm (activates when reading is lower than setpoint), or select watchdog alarm ('W.doG') to activate the alarm in case of watchdog error (see section 1.21.4).
- at the 'Setpoint' ('SEt') parameter configure the alarm activation point. Parameter value is accessible through 'fast access' (see section 1.21.11).
- at the 'Hysteresis' ('hYSt') parameter select the hysteresis value. Hysteresis applies to the alarm deactivation. Alarm deactivates once the reading is beyond the setpoint plus the hysteresis value. Hysteresis prevents relay switching in case of signal fluctuations close to the setpoint value.
- at the 'Activation delay' ('dEL.0') parameter configure the delay to apply before the alarm is activated. Delay starts to count once the setpoint is reached. Value from 0.0 to 99.9 seconds.
- at the 'Deactivation delay' ('dEL.1') parameter configure the delay to apply before the alarm is deactivated. Delay starts to count once the setpoint is reached plus the hysteresis value. Value from 0.0 to 99.9 seconds.
- to work with 'windowed alarms' (see Figure 7) activate 'Setpoint 2' ('SEt2') to 'on' and then configure the desired second setpoint value. Second setpoint must always be higher in value than the first setpoint.
- at the 'Inverted relay' ('r.lnU') parameter select 'on' to invert the activation logic of the relay. Relay is inactive when alarm is active, and relay is active when alarm is inactive.
- at the 'Locked alarm' ('A.Lck') parameter select 'on' to block the automatic alarm deactivation. Alarm deactivation must be performed manually, by pressing the 'LE' front button (see section 1.21.20).

1.21.11 Fast access

The *'fast access'* is an operator configurable menu. The operator can access this menu with a single press of the front key 'UP' (▲). The configured menu entries will be accessible. Eligible parameters to be accessed by this menu are:

- access to the bus activity through the 'UP' (▲) key allows to see if there is activity at the bus (see 1.21.12).
- access to the maximum and minimum alarms through the 'UP' (▲) key allows to read and reset the values. To reset the memory values: visualize the value on display, press the 'UP' (▲) key, when the 'rSt' message appears, press 'SQ' (■). The instrument will return to the memory visualization. Press the 'LE' (◀) key to exit his menu.
- access to the alarm setpoints through the 'UP' (▲) key allows to read and modify the values. Only in 'Process slave' mode.
- access to the address through the 'UP' (▲) key allows to read the local address of the instrument.

The *'fast access'* menu is not affected by the password function. This means that the configuration menu can be password blocked, while some configured functions or parameters can still be accessible to the operator through the *'fast access'* menu.

• Super fast access

If only a single function is selected for the *'fast access'* menu, pressing the the 'UP' (▲) key will shortly display the function name and then automatically jump to the function value.

1.21.12 'Bus activity' function

'Bus activity' function is a detector of electrical activity on the bus. The function is to help when connecting the instrument to the bus for the first time. It provides information on whether there is electrical activity on the bus or not.

The 'Bus activity' function is visible in the form of a counter increasing its value on the display. It indicates that the UART is detecting information bytes on the bus. This detection means that there are data on the bus, and that it conforms to the configured speed and data format.

The 'Bus activity' is accessible through the key 'UP' (▲) when configuring the fast access menu (see section 1.21.11).

1.21.13 'On power up' function

The **'On Power Up'** ('on.Pu') functions allows to define a series of actions to activate when the instrument restarts after a power loss. Functions available are a delay so the instrument waits a defined time before starting to measure and control, and the state of the alarms. The functions will apply only after a restart due to power-loss, they will not apply after a restart due to changes in configuration.

Delaying the measure and control functions gives additional time to elements of the system who are slower, so they can start completely before the instrument begins to acquire signal and control the outputs.

While on delay mode, the instrument shows all decimal points lightened and flashing, all alarms are deactivated, and there is no signal acquisition or communications control. When the delay time is over, the instrument starts its normal functioning.

1.21.14 'Setpoint on bus' parameter


In 'Process slave' mode, the alarms are controlled locally and the alarm configuration is performed by the operator through the front keypad. Enable the **'Setpoint on bus'** ('StP.b') to 'on' to enable the writing of setpoint alarms through the bus. By default the value is 'off'.

Note : when the 'setpoint on bus' parameter is enabled, writing a value to the register will update the alarm setpoint, but modifying a setpoint through the front keypad will not update the register value.

1.21.15 'Decimal point' parameter

Only available in 'Process slave' mode. Set to **'Manual'** to manually configure the position of the decimal point. By default, the value is set to **'Remote'** and the decimal point is controlled through the bus.


1.21.16 'Fast access' configuration menu

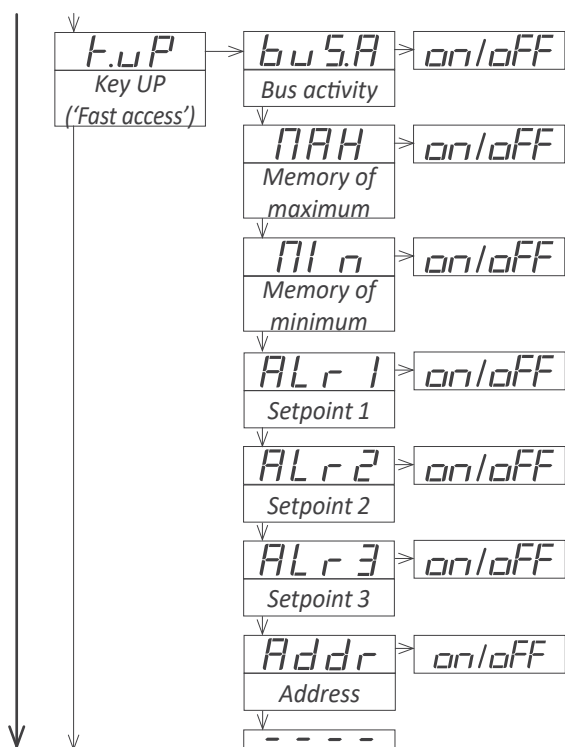

At the **'Key UP ('fast access') ('K.uP')** menu configure which functions and parameters will be accessible through the 'fast access' menu. Select **'on'** to activate each function. For more information see section 1.21.11.

- the **'Bus activity' ('buS.A')** function allows to visualize if there is activity at the communications bus (see 1.21.12).
- the **'Memory of maximum' ('MAH')** or **'Memory of minimum' ('MI n')** functions allow to visualize the maximum or minimum reading value stored in memory.
- the **'Setpoint 1' ('ALr1')** function allows to visualize and modify the alarm 1 setpoint through the 'fast access' menu. Only in 'Process slave' mode.
- the **'Setpoint 2' ('ALr2')** function allows to visualize and modify the alarm 2 setpoint through the 'fast access' menu. Only in 'Process slave' mode.
- the **'Setpoint 3' ('ALr3')** function allows to visualize and modify the alarm 3 setpoint through the 'fast access' menu. Only in 'Process slave' mode.
- the **'Address' ('Addr')** function allows to visualize the address of the instrument.


1.21.17 'On power up' configuration menu

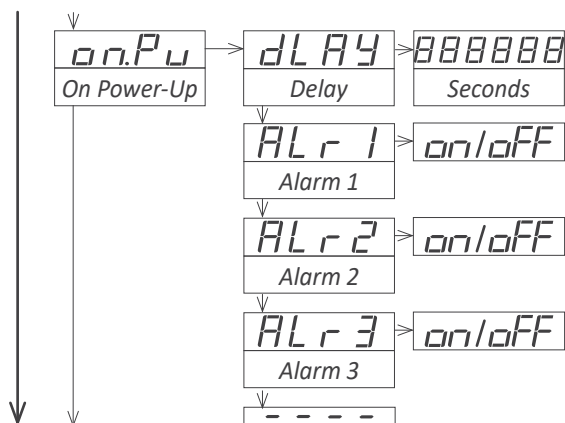

The **'On Power Up' ('on.Pu')** menu assigns functions to be applied when the instrument starts after a power loss. For more information see section 1.21.13.


- at the **'Delay' ('dLAY')** parameter configure the time the instrument will wait before starting normal functionality. Time between 0 and 200 seconds.
- at the **'Alarm 1', 'Alarm 2'** and **'Alarm 3'** parameters configure the state for the alarms at power up.

1.21.18 Setpoint on bus' configuration menu

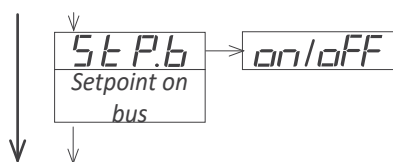


Available in 'Process slave' mode only. Enables access to the alarm setpoint registers through the bus. For more information see section 1.21.14.

1.21.19 'Decimal point' configuration menu

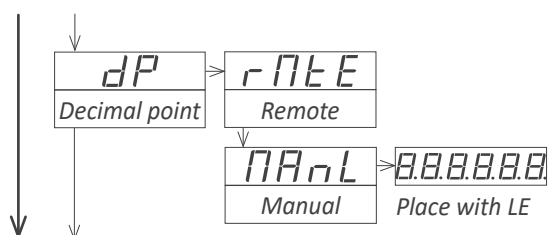

Only available in 'Process slave' mode. Set to **'Manual'** to manually configure the position of the decimal point. For more information see section 1.21.15.


1.21.20 'Key LE' configuration menu

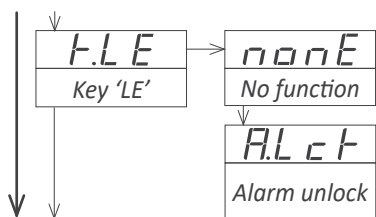

The 'LE' (◀) key at the front of the instrument can be configured to activate several functions. Only one function can be assigned to the 'LE' (◀) key. Eligible functions are the alarm unlock function (see section 1.21.8).

- the 'No function' ('nonE') parameter assigns no function.
- the 'Alarm unlock' ('A.Lck') parameter assigns the manual alarm unlocking, when the 'Locked alarms' ('A.Lck') is active.


1.21.21 Password configuration

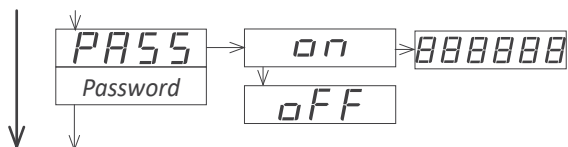

The password function blocks access to the configuration menu. The 'fast access' menu is not affected by the password function. This means that the configuration menu can be password blocked, while some configured functions or parameters can still be accessible to the operator through the 'fast access' menu.


To active the 'Password' function select 'on' and introduce the 6 digits code. The code will be requested when trying to access the 'configuration menu' (front key 'SQ' (■)).

1.21.22 Default factory configuration

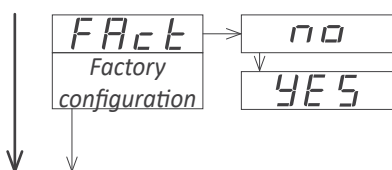


At the 'Factory configuration' ('FAct') menu select 'yes' to activate the default factory configuration. See section 1.6 for a list of default parameters.

1.21.23 Firmware version

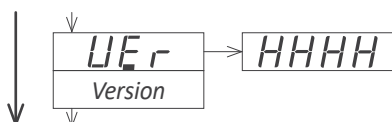


The 'Version' ('VEr') menu informs about the firmware version installed on the instrument.

1.21.24 Brightness configuration

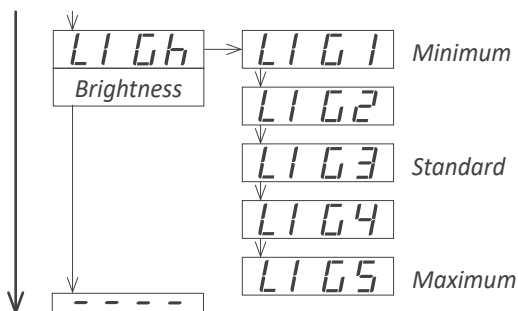

At the 'Brightness' ('LIGh') menu select the intensity level for the display . Use this function to adapt the brightness to match other instruments in the vicinity or to the darkness or clarity of your environment.

1.21.25 Access to the options configuration menu

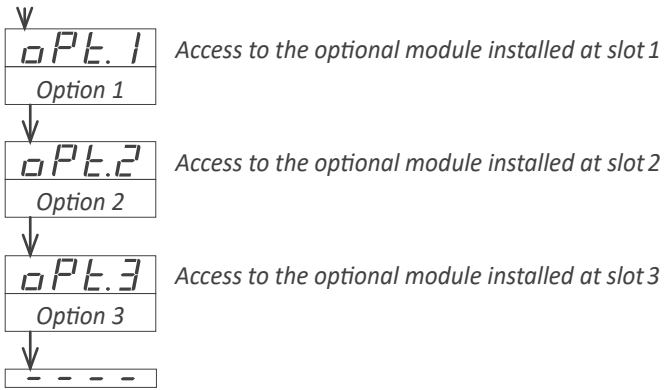



The output and control options are optional modules that can be installed at the instrument. Formats B24 and B44 have 2 free slots for output and control options, while formats B26 and B46 have 3 free slots (*see section 1.7*).


Several of these optional modules have their own configuration menu embedded. The '**Opt.1**', '**Opt.2**' and '**Opt.3**' menu entries give access to the configuration menu of the option installed.

See section 2 for a list of available output and control modules.

1.22 Full configuration menu

Press 'SQ' (■) for 1 second to access the 'Configuration menu'.

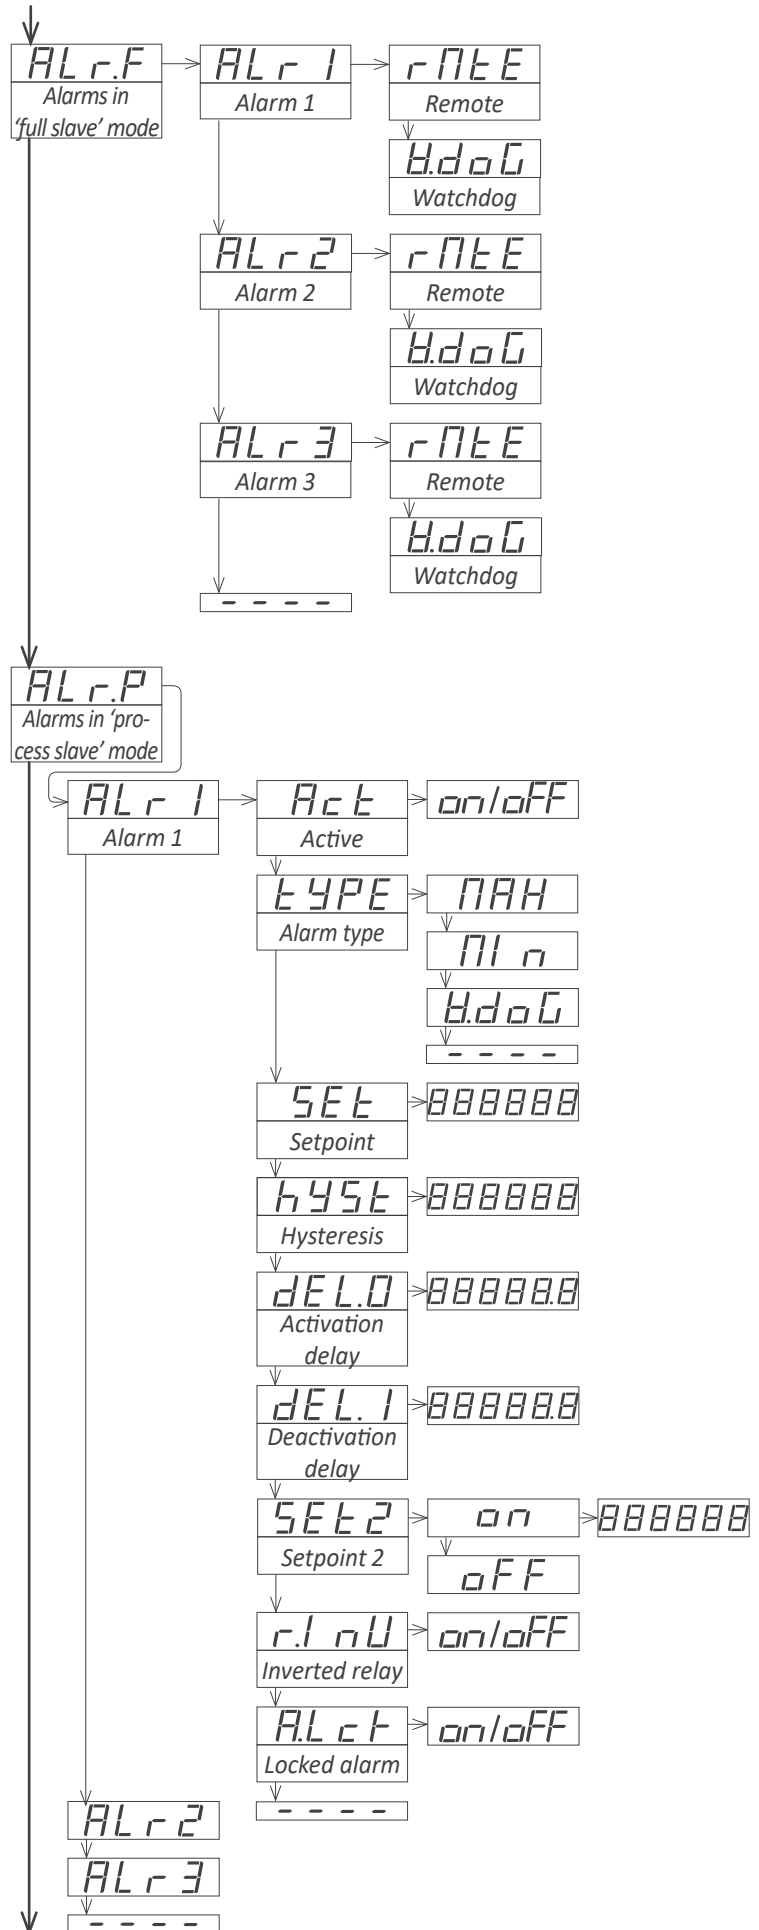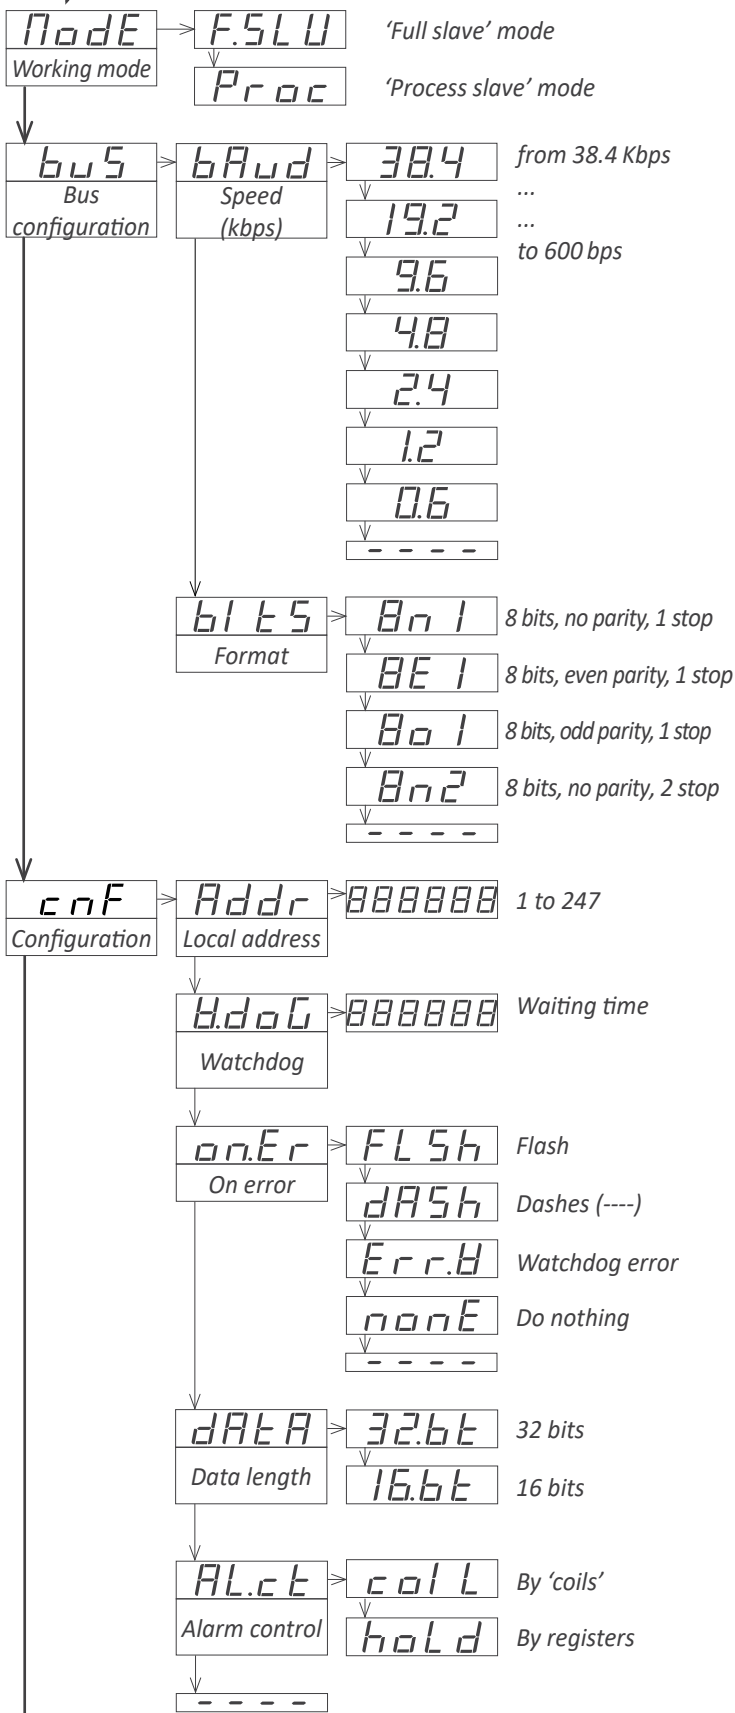

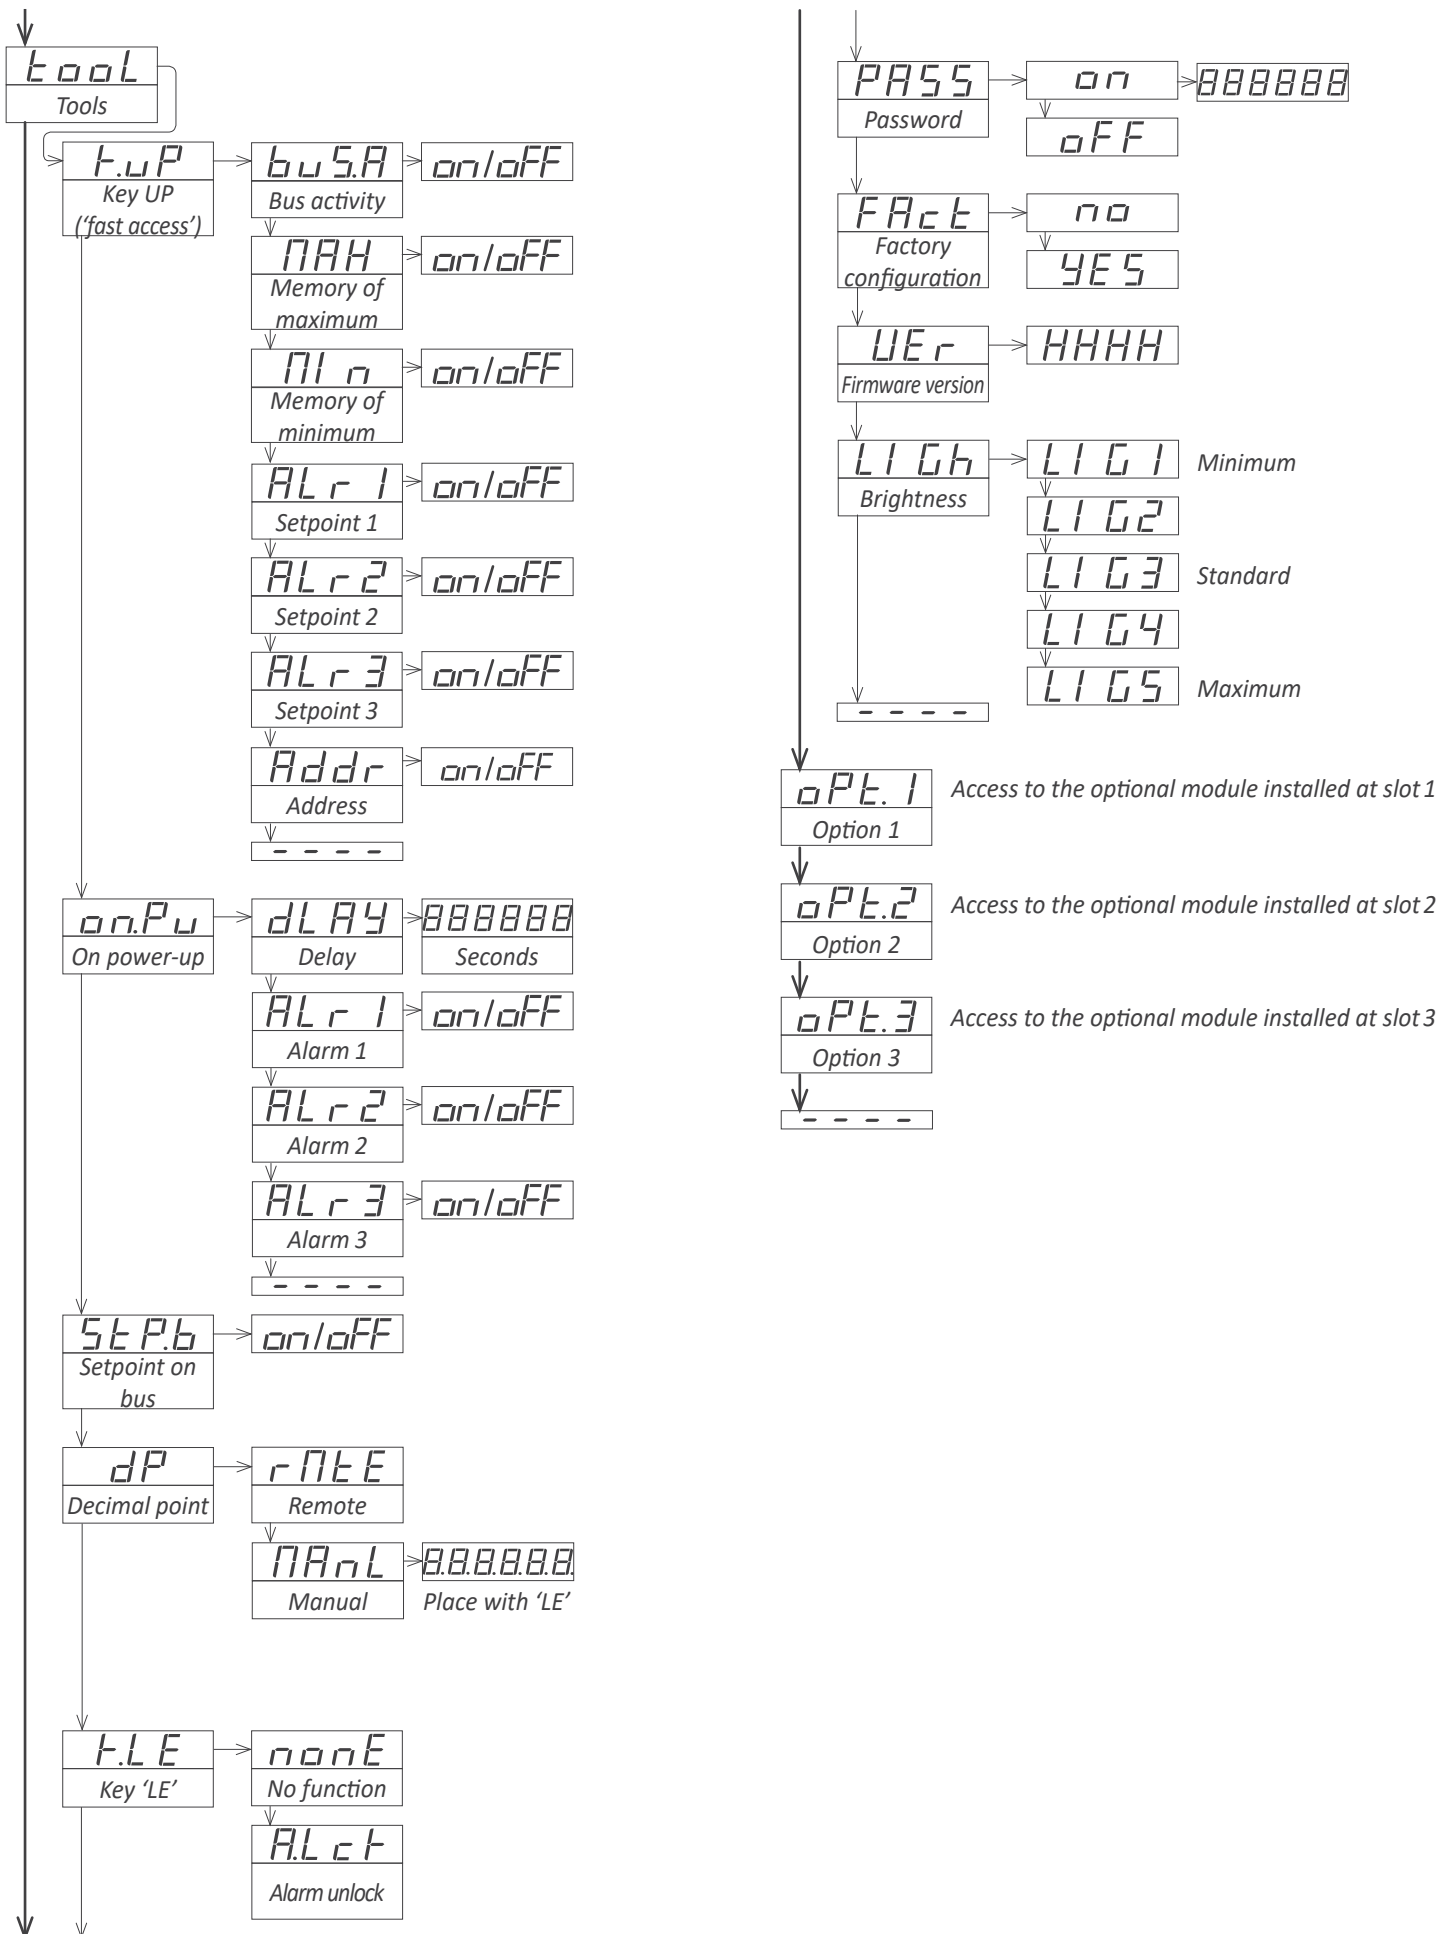

1.23 Mounting

The instrument fixations are designed to allow panel mount, wall mount, or hanging mount. For each type of mounting,

- Panel mount. Apply the cut-out to the panel as seen on section 1.7. Remove the side fixations. Introduce the instrument into the panel cut-out. Mount the side fixations as shown (see Figure 8). Slightly loosen the fixation screw of one side and press the instrument against the panel. Tighten the fixation screw so it presses the panel and maintains the fixation. Repeat with the opposite side fixation.

see the position of the fixations at the images below.

- Wall mount. Mount the side fixations against the wall, as shown (see Figure 10). Each fixation has 2 holes with 4,5 mm diameter and a separation between hole centers of 30 mm. Once the side fixations are secured against the wall, place the instrument and press the fixation screws slightly. Tilt the instrument to the desired viewing angle and firmly screw the fixation screws.

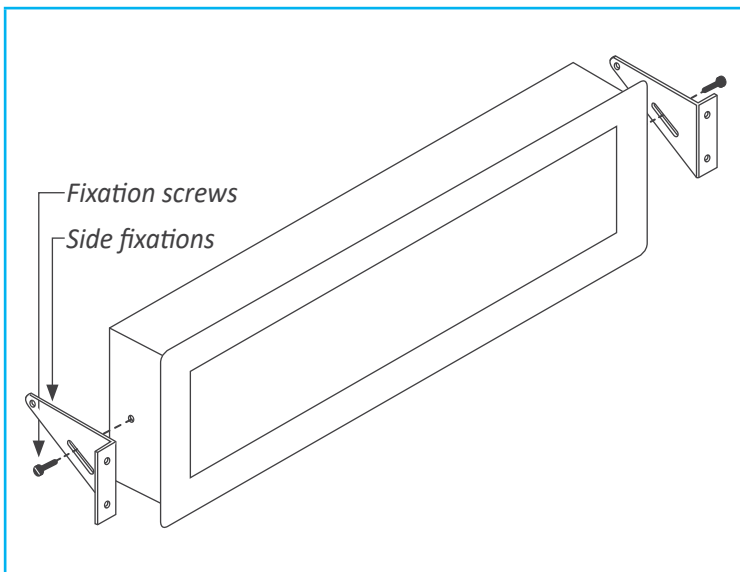


Figure 8 - Panel mount

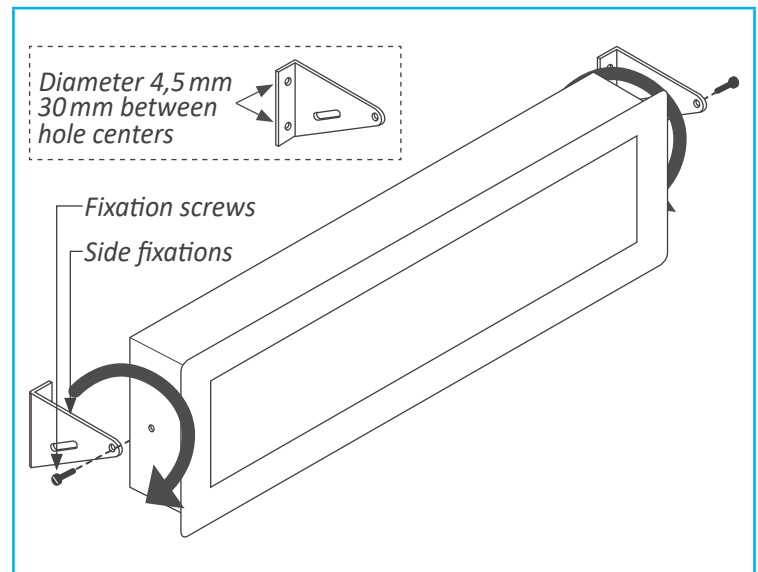


Figure 10 - Wall mount

- Hanging mount. Mount the side fixations as shown (see Figure 9). Each fixation has 2 holes with 4,5 mm diameter and a separation between hole centers of 30 mm. Instrument can be hanged using cable, threaded rod,

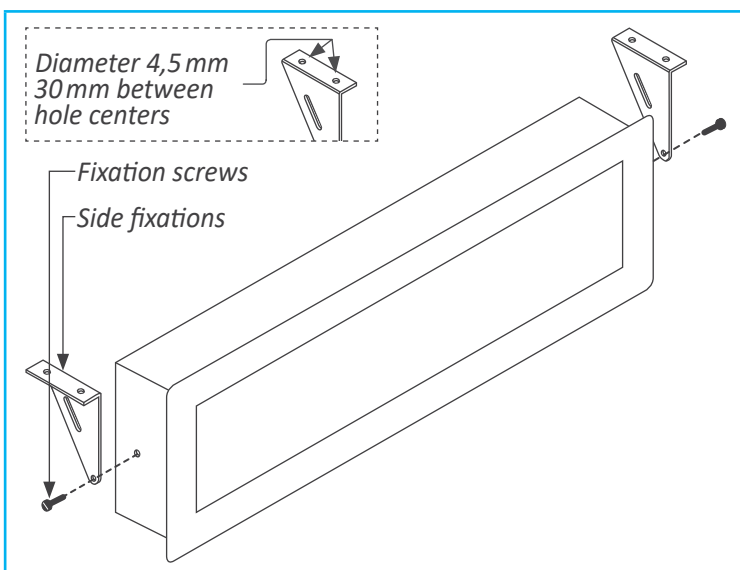


Figure 9 - Hanging mount

1.24 Installation precautions



Risk of electrical shock. Instrument terminals can be connected to dangerous voltage.



Instrument conforms to CE rules and regulations.

This instrument has been designed and verified conforming to the 61010-1 CE security regulation, for industrial applications. Installation of this instrument must be performed by qualified personnel only. This manual contains the appropriate information for the installation. Using the instrument in ways not specified by the manufacturer may lead to a reduction of the specified protection level. Disconnect the instrument from power before starting any maintenance and / or installation action. The instrument does not have a general switch and will start operation as soon as power is connected. The instrument does not have protection fuse, the fuse must be added during installation.

An appropriate ventilation of the instrument must be assured. Do not expose the instrument to excess of humidity. Maintain clean by using a humid rag and do NOT use abrasive products such as alcohols, solvents, etc.

General recommendations for electrical installations apply, and for proper functionality we recommend : if possible, install the instrument far from electrical noise or magnetic field generators such as power relays, electrical motors, speed variators, ... If possible, do not install along the same conduits power cables (power, motor controllers, electrovalves, ...) together with signal and/or control cables.

Before proceeding to the power connection, verify that the voltage level available matches the power levels indicated in the label on the instrument.

In case of fire, disconnect the instrument from the power line, fire alarm according to local rules, disconnect the air conditioning, attack fire with carbonic snow, never with water.

1.25 Warranty

This instrument is warranted against all manufacturing defects for a period of 24 MONTHS from the shipment date. This warranty does not apply in case of misuse, accident or manipulation by non-authorized personnel. In case of malfunction get in contact with your local provider to arrange for repair. Within the warranty period and after examination by the manufacturer, the unit will be repaired or substituted when found to be defective. The scope of this warranty is limited to the repair cost of the instrument, not being the manufacturer eligible for responsibility on additional damages or costs.

1.26 CE declaration of conformity

Manufacturer FEMA ELECTRÓNICA, S.A.
 Altimira 14 - Pol. Ind. Santiga
 E08210 - Barberà del Vallès
 BARCELONA - SPAIN
 www.fema.es - info@fema.es

Products B24-RTU, B44-RTU, B26-RTU, B46-RTU

The manufacturer declares that the instruments indicated comply with the directives and rules indicated below.

Electromagnetic compatibility directive 2014/30/EU

Low voltage directive 2014/65/EU

Directive ROHS 2011/65/EU

Directive WEEE 2012/19/EU

Security rules EN-61010-1:2010

Instrument Fixed, Permanently connected
 Pollution degree 1 and 2 (without condensation)
 Isolation Basic + Protective union

Electromagnetic compatibility rules EN-61326-1:2013

EM environment Industrial

Immunity levels

EN-61000-4-2	By contact ± 4 KV By air ± 8 KV	Criteria B Criteria B
EN-61000-4-3		Criteria A
EN-61000-4-4	On AC power lines: ± 2 KV On DC power lines: ± 2 KV On signal lines : ± 1 KV	Criteria B Criteria B Criteria B
EN-61000-4-5	Between AC power lines ± 1 KV Between AC power lines and earth ± 2 KV Between DC power lines ± 1 KV Between DC power lines and earth ± 2 KV Between signal lines and earth ± 1 KV	Criteria B Criteria B Criteria B Criteria B Criteria B
EN-61000-4-6		Criteria A
EN-61000-4-8	30 A/m at 50/60 Hz	Criteria A
EN-61000-4-11	0 % 1 cycle 40 % 10 cycles 70 % 25 cycles 0 % 250 cycles	Criteria A Criteria A Criteria B Criteria B

Emission levels

CISPR 11 Instrument Class A, Group 1 Criteria A

Barberà del Vallès October 2020
 Xavier Juncà - Product Manager

Declarations available:

CE - www.fema.es/docs/5647_CE-Declaration_B_en.pdf

UK CA - www.fema.es/docs/5653_UKCA-Declaration_B_en.pdf



According to directive 2012/19/EU, electronic equipment must be recycled in a selective and controlled way at the end of its useful life.

2. Output and control modules

2.1 Module R1

The R1 module provides 1 relay output to install in large format industrial meters from Series B. Formats B26 and B46 accept up to 3 relays, and formats B24 and B44 accept up to 2 relays.

Configuration is performed from the front keypad of the instrument, by setting the alarm parameters. Check the alarm menu parameters at the instrument user's manual for full information.

Modules R1 can be provided factory installed into a Series B instrument, or standalone for delayed installation. No soldering or special configuration is required. See section 1.9 on how to install output and control modules.

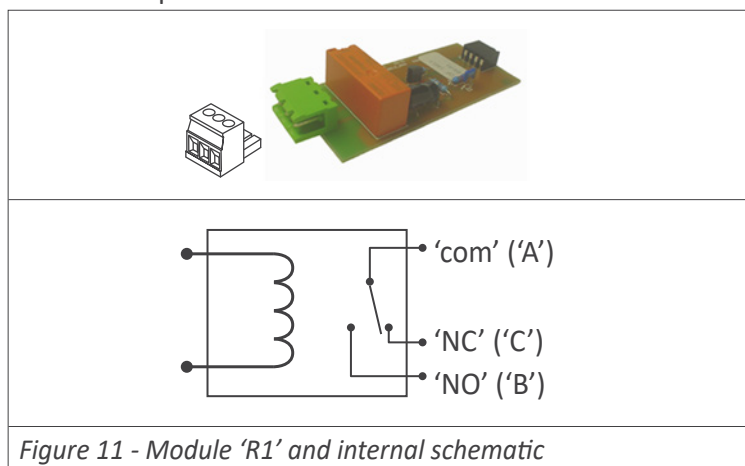


Figure 11 - Module 'R1' and internal schematic

Type of relay	3 contacts (Com, NO, NC)
Max. current	3 A (resistive load)
Voltage	250 Vac continuous
Isolation	3500 Veff
Terminal	plug-in screw clamp, pitch 5.08 mm
Installation allowed at	slot 1, slot 2, slot 3

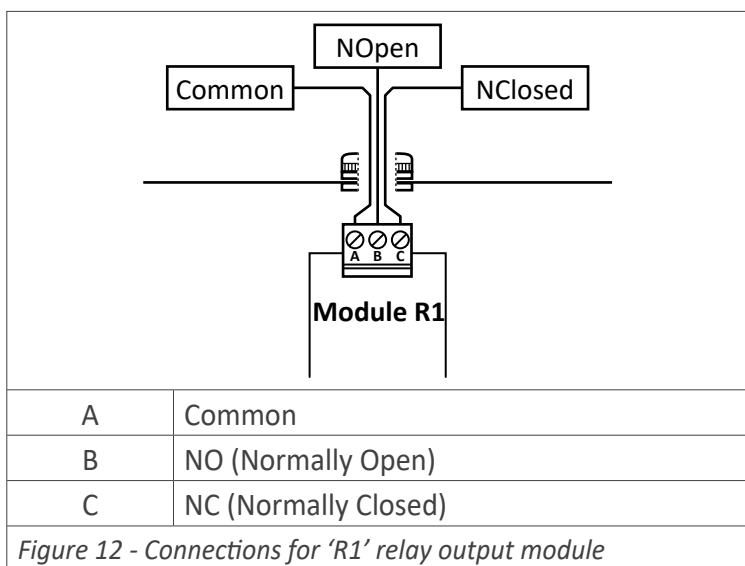


Figure 12 - Connections for 'R1' relay output module

For more information:
http://fema.es/docs/4326_SERIES-B_OPTIONS_manual_en.pdf

2.2 Module T1

The T1 module provides 1 transistor output to install in large format industrial meters from Series B. Formats B26 and B46 accept up to 3 transistor outputs, and formats B24 and B44 accept up to 2 transistor outputs.

Configuration is performed from the front keypad of the instrument, by setting the alarm parameters. Check the alarm menu parameters at the instrument user's manual for full information.

Modules T1 can be provided factory installed into a Series B instrument, or standalone for delayed installation. No soldering or special configuration is required. See section 1.9 on how to install output and control modules.

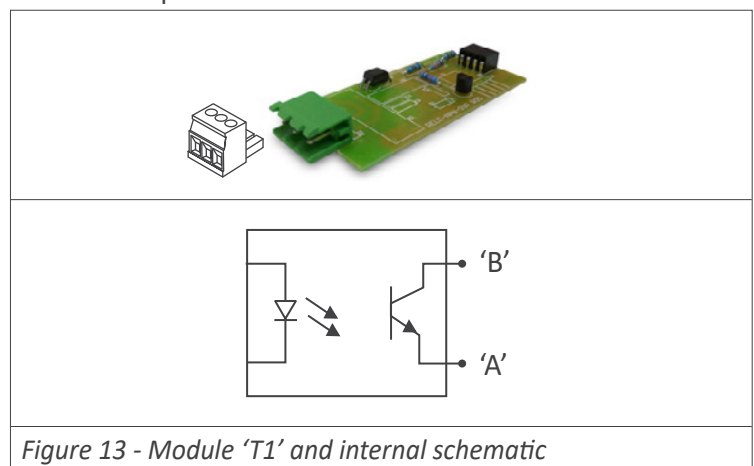


Figure 13 - Module 'T1' and internal schematic

Type of output	transistor
Max. voltage	35 Vdc
Max. current	50 mA
Isolation	3500 Veff, optoisolated
Terminal	plug-in screw clamp, pitch 5.08 mm
Installation allowed at	slot 1, slot 2, slot 3

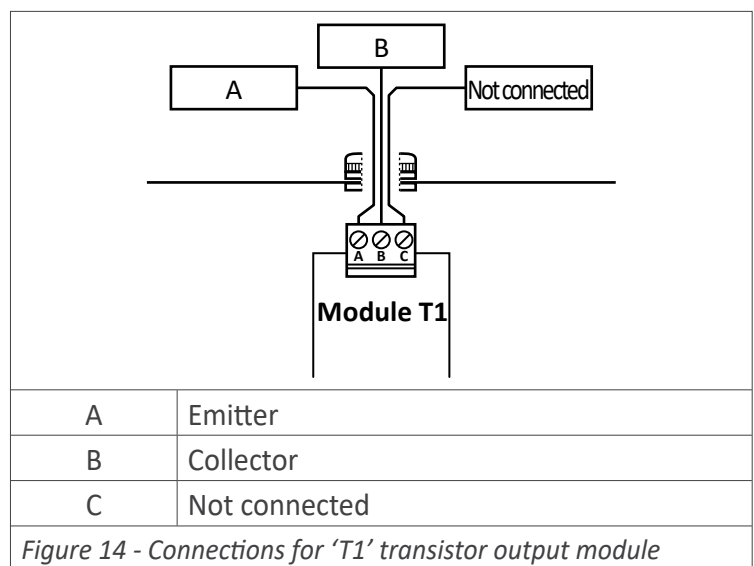


Figure 14 - Connections for 'T1' transistor output module

For more information:
http://fema.es/docs/4326_SERIES-B_OPTIONS_manual_en.pdf

2.3 Module SSR

The SSR module provides 1 output for SSR relay control, to install in large format industrial meters from Series B. Formats B26 and B46 accept up to 3 SSR control outputs, and formats B24 and B44 accept up to 2 SSR control outputs.

Configuration is performed from the front keypad of the instrument, by setting the alarm parameters. Check the alarm menu parameters at the instrument user's manual for full information.

Modules SSR can be provided factory installed into a Series B instrument, or standalone for delayed installation. No soldering or special configuration is required. See section 1.9 on how to install output and control modules.



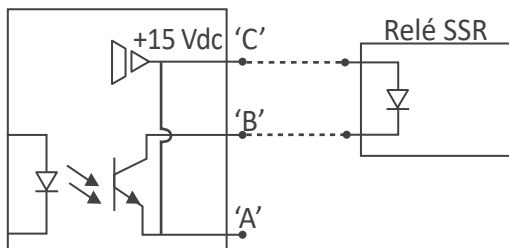


Figure 15 - Module 'SSR' and internal schematic

Type of output	for SSR relay control
Output voltage	+15 Vdc
Max. current	45 mA
Isolation	1000 Vdc
Terminal	plug-in screw clamp, pitch 5.08 mm
Installation allowed at	slot 1, slot 2, slot 3

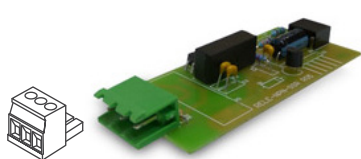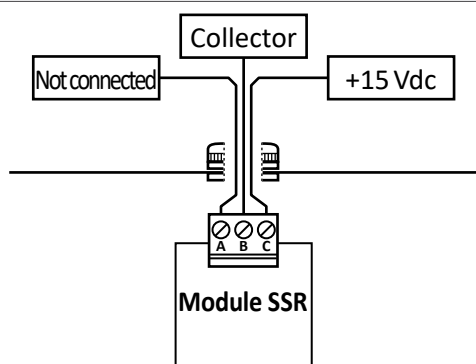

A	Not connected
B	Collector (-)
C	+15 Vdc (+)

Figure 16 - Connections for 'SSR' control module

For more information:
http://fema.es/docs/4326_SERIES-B_OPTIONS_manual_en.pdf

2.4 Module AO

The AO module provides 1 analog output, configurable for 4/20 mA or 0/10 Vdc signal, to install in large format industrial meters from Series B. Formats B26 and B46 accept up to 3 analog outputs, and formats B24 and B44 accept up to 2 analog outputs.

Output signal is fully scalable, both with positive and negative slopes, and is proportional to the reading. The mA output can be configured for active loops (the instrument provides the power to the mA loop) or passive loops (the loop power is external to the instrument).

Configuration is performed from the front keypad of the instrument, by accessing the menu entries 'Opt.1', 'Opt.2' or 'Opt.3', according to the slot where the module is installed.

AO modules can be provided factory installed into a Series B instrument, or standalone for delayed installation. No soldering or special configuration is required. See section 1.9 on how to install output and control modules.


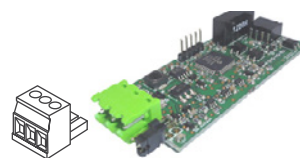


Figure 17 - Module 'AO'

Signal output	4/20mA, 0/10Vdc (active and passive)
Accuracy	0.1% FS
Isolation	1000 Vdc
Terminal	plug-in screw clamp, pitch 5.08 mm
Installation allowed at	slot 1, slot 2, slot 3

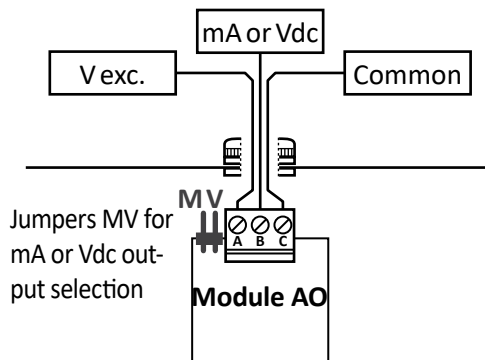

A	Excitation voltage
B	Signal in mA or Vdc
C	Common
Jumper M	Jumper closed for mA output
Jumper V	Jumper closed for Vdc output

Figure 18 - Connections for 'AO' analog output module

For more information:
http://fema.es/docs/4326_SERIES-B_OPTIONS_manual_en.pdf

2.5 Module RTU

The RTU module provides an isolated Modbus RTU communications port, to install in large format industrial meters from Series B.

The RTU module implements function '4' ('Read Input Registers') of the Modbus RTU protocol, to access the instrument registers (reading value, alarm status, memory of maximum and minimum, ...).

Configuration is performed from the front keypad of the instrument, by accessing the menu entries 'Opt.1', 'Opt.2' or 'Opt.3', according to the slot where the module is installed.

Modules RTU can be provided factory installed into a Series B instrument, or standalone for delayed installation. No soldering or special configuration is required. See section 1.9 on how to install output and control modules.


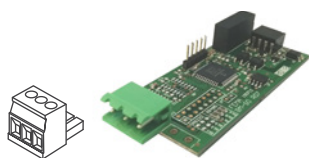


Figure 19 - Communications module 'RTU'

Protocol	Modbus RTU
Bus	RS-485, up to 57.6 Kbps
Isolation	1000 Vdc
Terminal	plug-in screw clamp, pitch 5.08 mm
Installation allowed at	slot 1, slot 2, slot 3

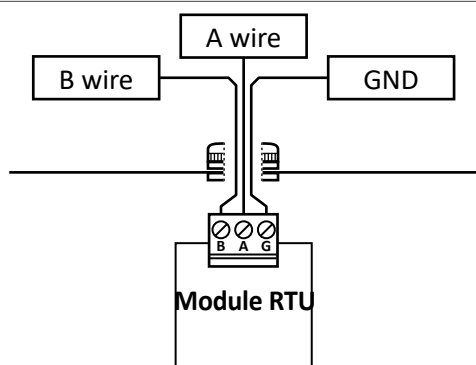

A	Bus signal A
B	Bus signal B
G	GND

Figure 20 - Connections for Modbus 'RTU' communications module

For more information:
http://fema.es/docs/4326_SERIES-B_OPTIONS_manual_en.pdf

2.6 Module S4

The S4 module provides an isolated RS-485 ASCII communications port, to install in large format industrial meters from Series B.

The S4 module implements a MASTER / SLAVE protocol, with up to 31 addressable slaves. In SLAVE mode allows access to reading values, alarm status, memory of maximum and minimum, ...

Configuration is performed from the front keypad of the instrument, by accessing the menu entries 'Opt.1', 'Opt.2' or 'Opt.3', according to the slot where the module is installed.

Modules S4 can be provided factory installed into a Series B instrument, or standalone for delayed installation. No soldering or special configuration is required. See section 1.9 on how to install output and control modules.


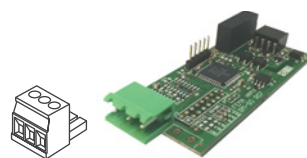


Figure 21 - Communications module 'S4'

Protocol	ASCII
Bus	RS-485, up to 57.6 Kbps
Isolation	1000 Vdc
Terminal	plug-in screw clamp, pitch 5.08 mm
Installation allowed at	slot 1, slot 2, slot 3

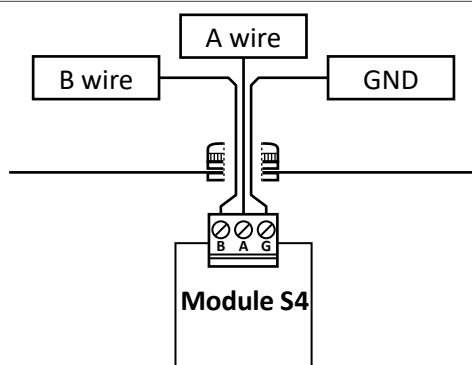

A	Bus signal A
B	Bus signal B
G	GND

Figure 22 - Connections for RS-485 'S4' communications module

For more information:
http://fema.es/docs/4326_SERIES-B_OPTIONS_manual_en.pdf

2.7 Module S2

The S2 module provides an isolated RS-232 ASCII communications port, to install in large format industrial meters from Series B.

The S2 module implements a MASTER / SLAVE protocol, with up to 31 addressable slaves, with 'daisy-chain' connection. In SLAVE mode allows access to reading values, alarm status, memory of maximum and minimum, ...

Configuration is performed from the front keypad of the instrument, by accessing the menu entries 'Opt.1', 'Opt.2' or 'Opt.3', according to the slot where the module is installed.

Modules S2 can be provided factory installed into a Series B instrument, or standalone for delayed installation. No soldering or special configuration is required. See section 1.9 on how to install output and control modules.


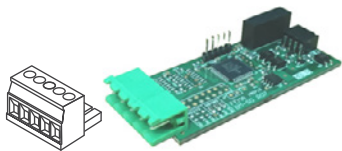


Figure 23 - Communications module Module 'S2'

Protocol	ASCII
Bus	RS-232, up to 57.6 Kbps
Isolation	1000 Vdc
Terminal	plug-in screw clamp, pitch 5.08 mm
Installation allowed at	slot 1, slot 2, slot 3

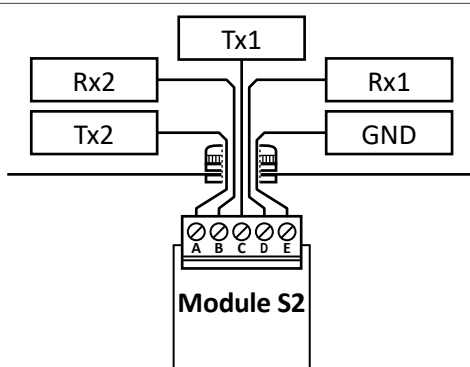

A	'Daisy chain' Tx data transmission
B	'Daisy chain' Rx data reception
C	Tx data transmission
D	Rx data reception
E	GND

Figure 24 - Connections for RS-232 'S2' communications module

For more information:

http://fema.es/docs/4326_SERIES-B_OPTIONS_manual_en.pdf

3. Other options and accessories

3.1 RKB - Remote keypad

Remote keypad for large format industrial meters from Series B. Replicates a remote version of the front keypad, close to the operator.

(*Cable not provided).



3.2 Red LED

Red LED



3.3 Green LED

Green LED




Empty page



DIGITAL PANEL METERS
 Series Industry



SIGNAL CONVERTERS
 Isolated

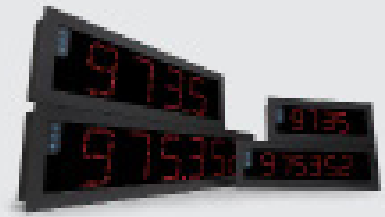

LARGE DISPLAYS
 Series Industry



PANEL METERS . SERIES OEM
 Low Cost



CONVERTERS . SERIES OEM
 Low Cost



LARGE DISPLAYS
 Series Special



SPECIAL INSTRUMENTS
 Series Special



DATA ACQUISITION
 Series Industry



'CUSTOMIZED' INSTRUMENTS